



AMERICAN STANDARD TELECASTER 0108400/8402

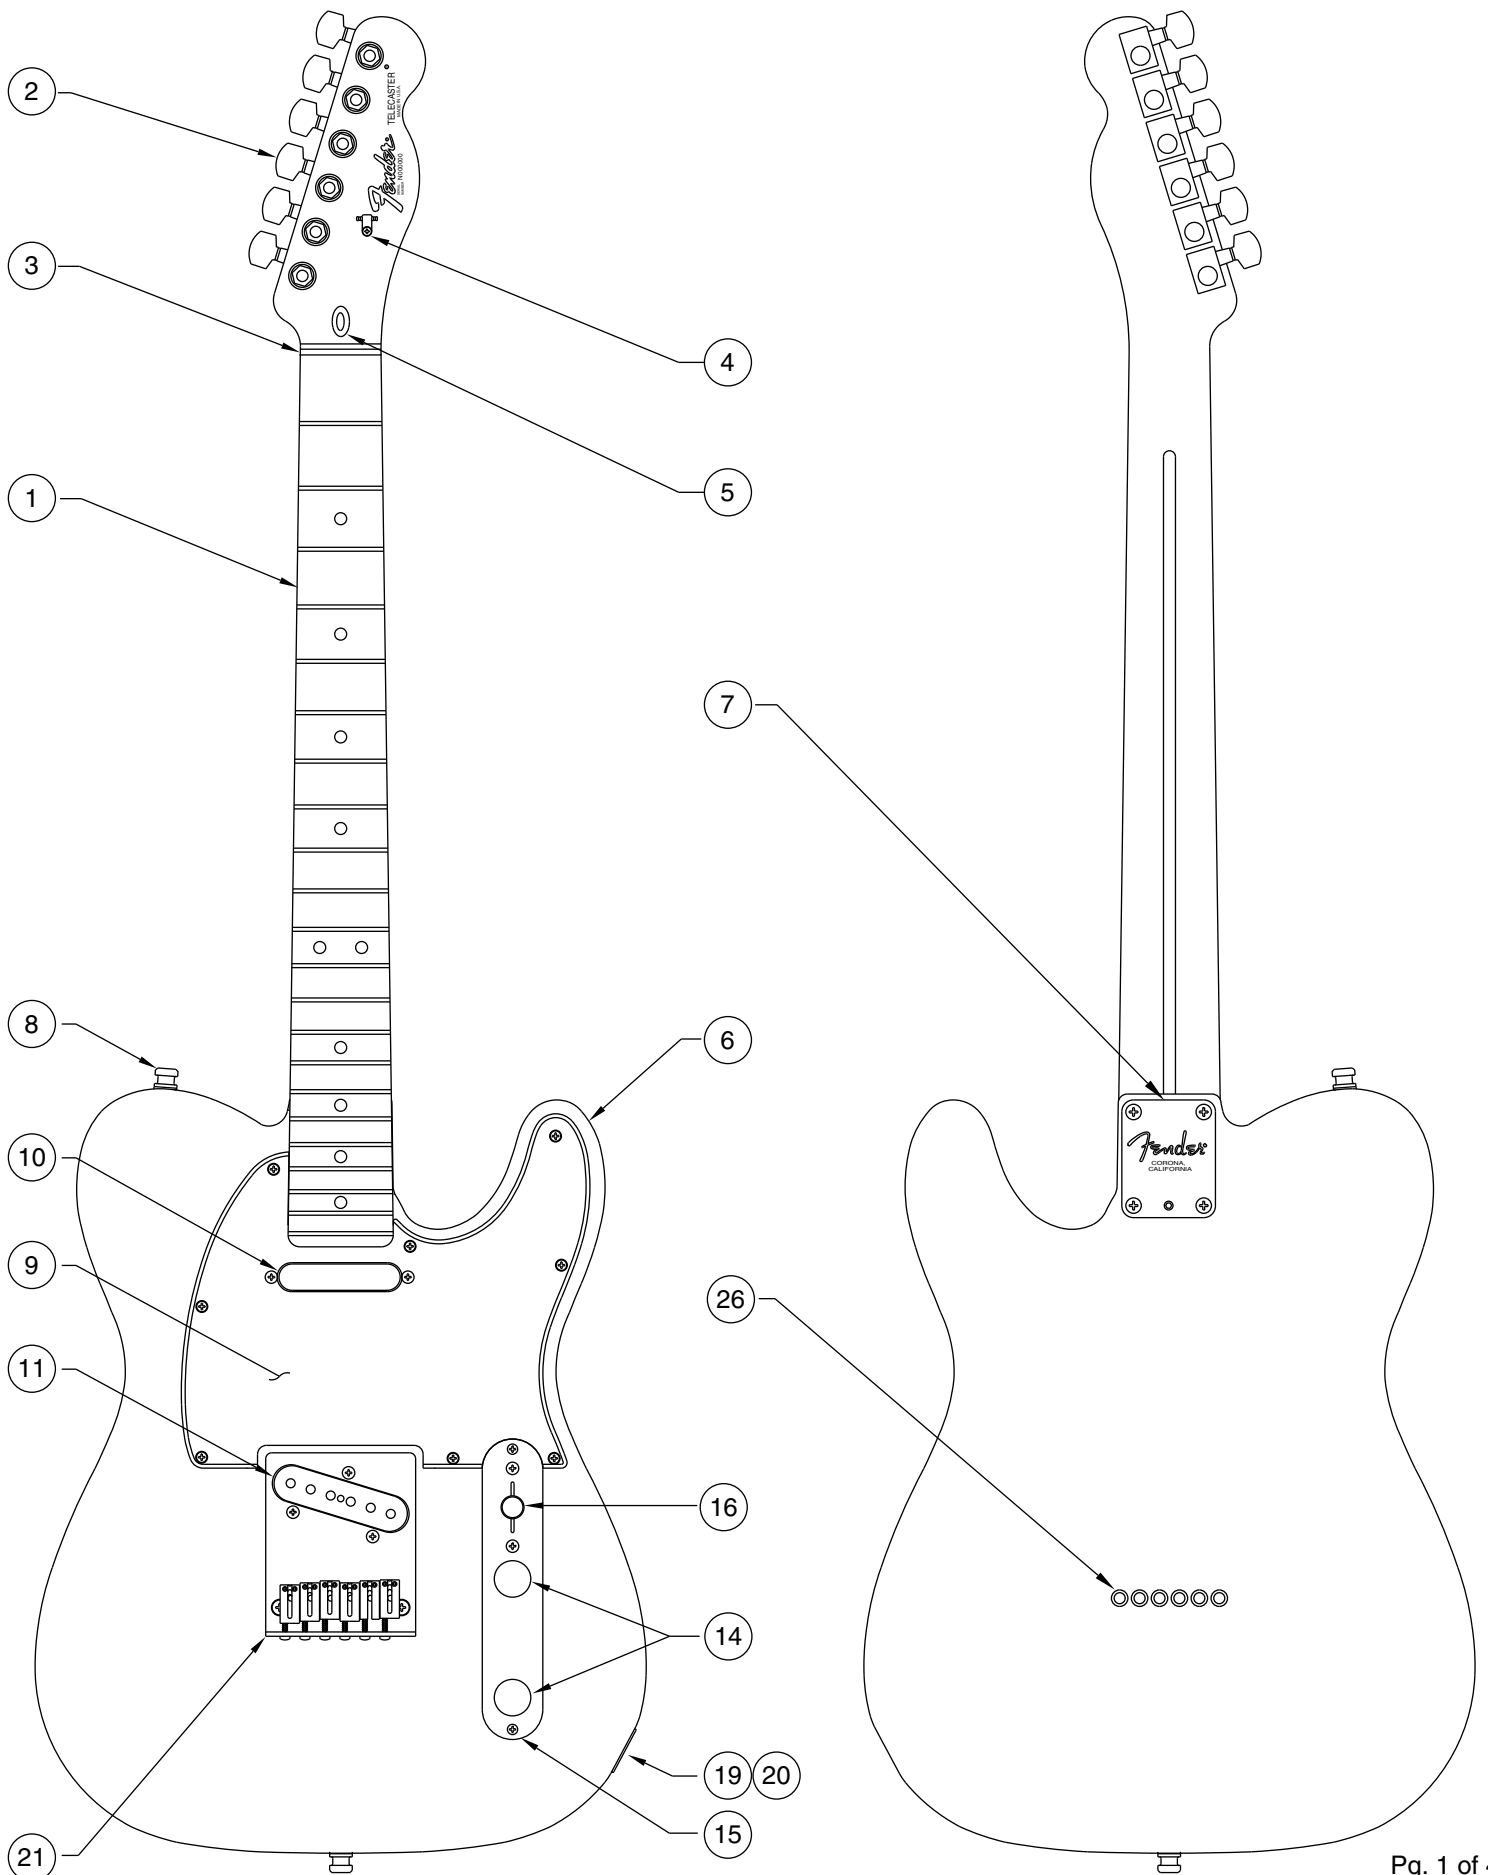


# AMERICAN STANDARD TELECASTER 0108400/8402

## CONTROL ASSEMBLY

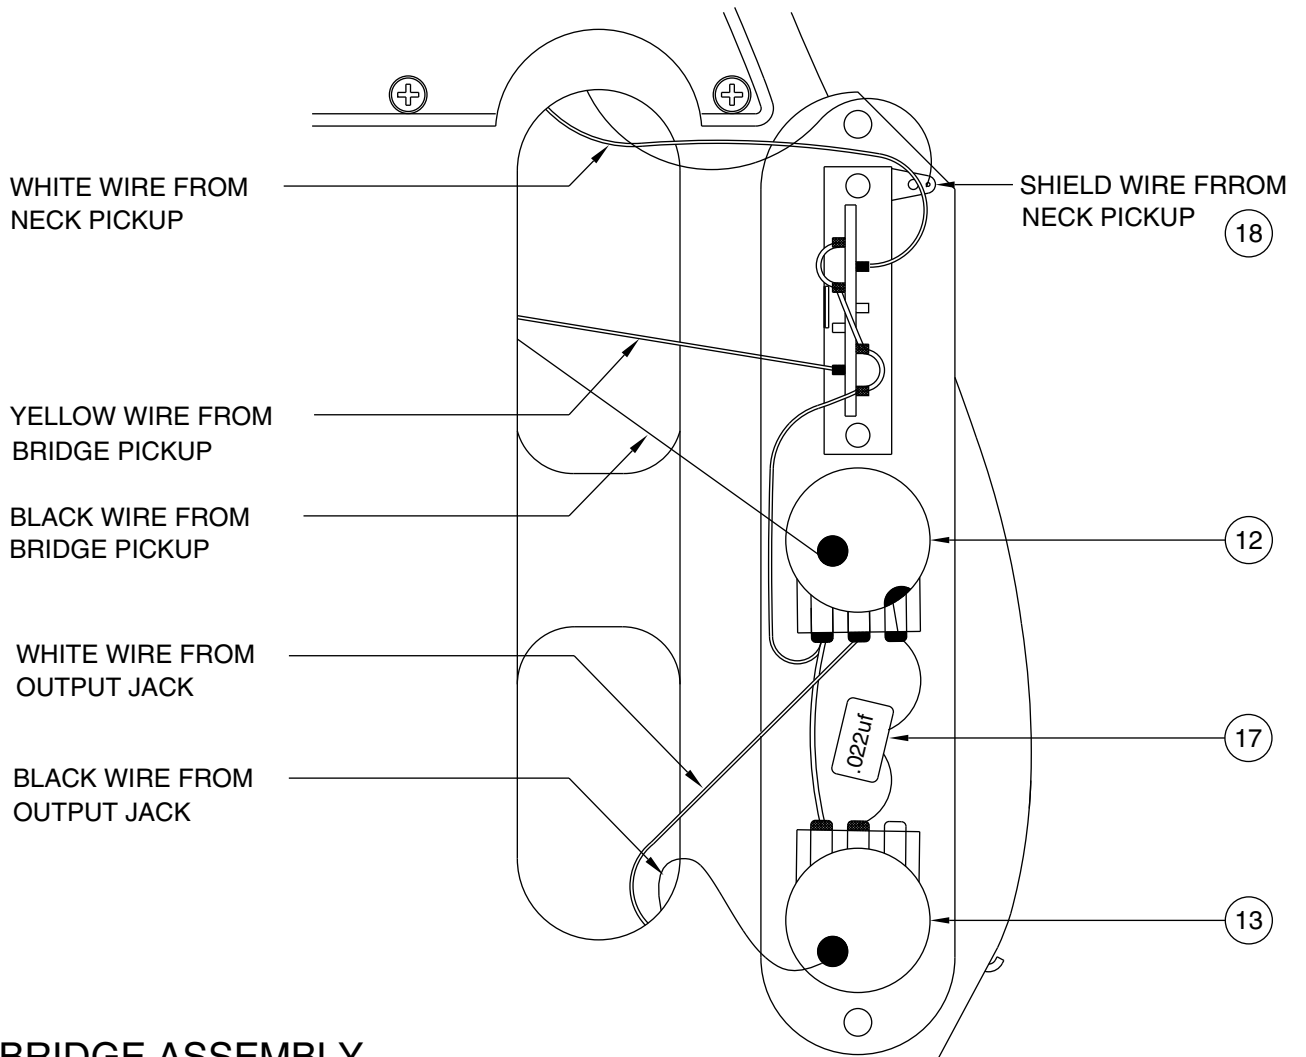

## BRIDGE ASSEMBLY

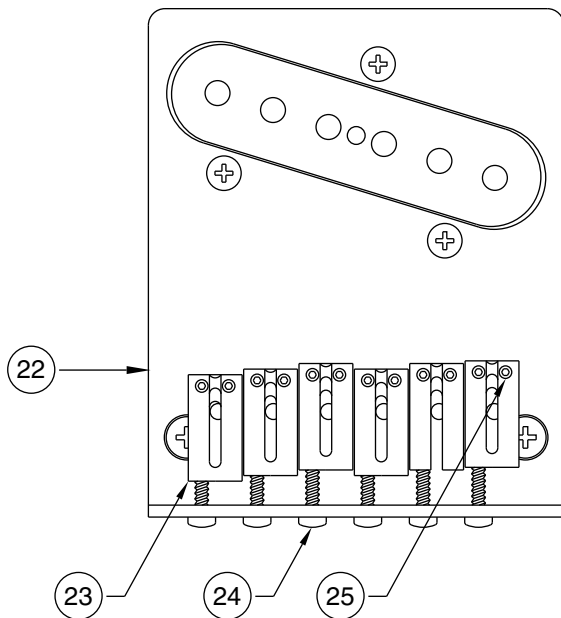


## AMERICAN STANDARD TELECASTER 0108400/8402

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0028177000	Neck, American Standard Telecaster, M/N	26	0021429000	String Retainer Ferrule
	0028176000	Neck, American Standard Telecaster, R/W			
2	0021374000	Tuning Key, (1) Set, W/Bushing			
3	0083675000	Bone Nut			
4	0021537000	String Retainer			
	0021405000	Mounting Screw			
5	0020810000	Truss Rod Adjustment Nut			
	0023811000	Truss Rod Adjusting Wrench			
6	0028174xxx	Body, Am. Std. Tele., Solid Paint			
	0038417xxx	Body, Am. Std. Tele., Natural Ash			
	0055221xxx	Body, Am. Std. Tele., Sunburst			
7	0054038000	Neck Mounting Plate			
	0021424000	Mounting Screw			
	0031571000	Tilt Adjustment Screw			
	0023811000	Tilt Adjusting Wrench			
8	0021453000	Strap Button			
	0021422000	Mounting Screw			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
9	0028178000	Pickguard, Am. Std. Tele., White/Black/White			
	0021407000	Mounting Screw			
10	0050890000	Pickup, Neck, Hot, Am. Std. Tele			
	0021409000	Mounting Screw			
	0039409000	Tubing, Latex Cut			
11	0050888000	Pickup, Bridge, Hot, Am. Std. Tele			
	0048631000	Mounting Screw			
	0036878000	Tubing, Latex Cut			
12	0019064000	Control, 250K, Audio			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
13	0050886000	Control, 250K, No Load			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
14	0013359000	Knob, Knurled (2)			
	0028897001	Screw Set			
15	0033134060	Control Plate			
	0021407000	Mounting Screw			
16	0053290000	Switch, Lever 3-Position			
	0021413000	Mounting Screw			
	0018359000	Knob, Black			
17	0024832000	Capacitor, .022uf			
18	0012869000	Solder Lug			
	0015116000	Mounting Screw			
19	0021956000	Output Jack			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
20	0021452000	Jack Ferrule			
21	0028182000	Bridge Assembly, Telecaster			
	0021373000	Mounting Screw			
	0018531000	Adjusting Wrench, Saddle Height			
22	0028184000	Bridge Plate			
23	0026099000	Bridge Section, (6)			
24	0031913000	Intonation Screw, 5&6			
	0029095000	Intonation Spring, 5&6			
	0017031000	Intonation Screw, 1- 4			
	0029094000	Intonation Spring, 1- 4			
25	0026780000	Height Adjustment Screw, 1&6			
	0018027000	Height Adjustment Screw, 2-5			

Body Part Number	
0055221500	3 Color Sunburst
0038417521	Natural Ash
0028174505	Olympic White
0028174506	Black
0028174524	Inca Silver
0028174574	Aqua Blue Metallic
0028174593	Purple Metallic

# AMERICAN STANDARD TELECASTER 0108400/8402

## SWITCH & CONTROL FUNCTION

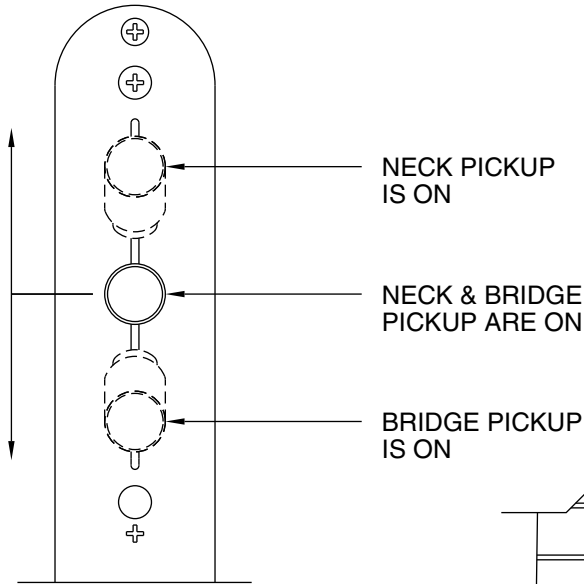

DETAIL  
3 WAY SWITCH

3 WAY SWITCH POSITION			
			← 3 WAY SWITCH POSITION
T1	T1	T1	← TONE CONTROL
			← NECK PICKUP
			← BRIDGE PICKUP
	PICKUP IS ON		PICKUP IS OFF

