



# VOODOO STRATOCASTER 0106602

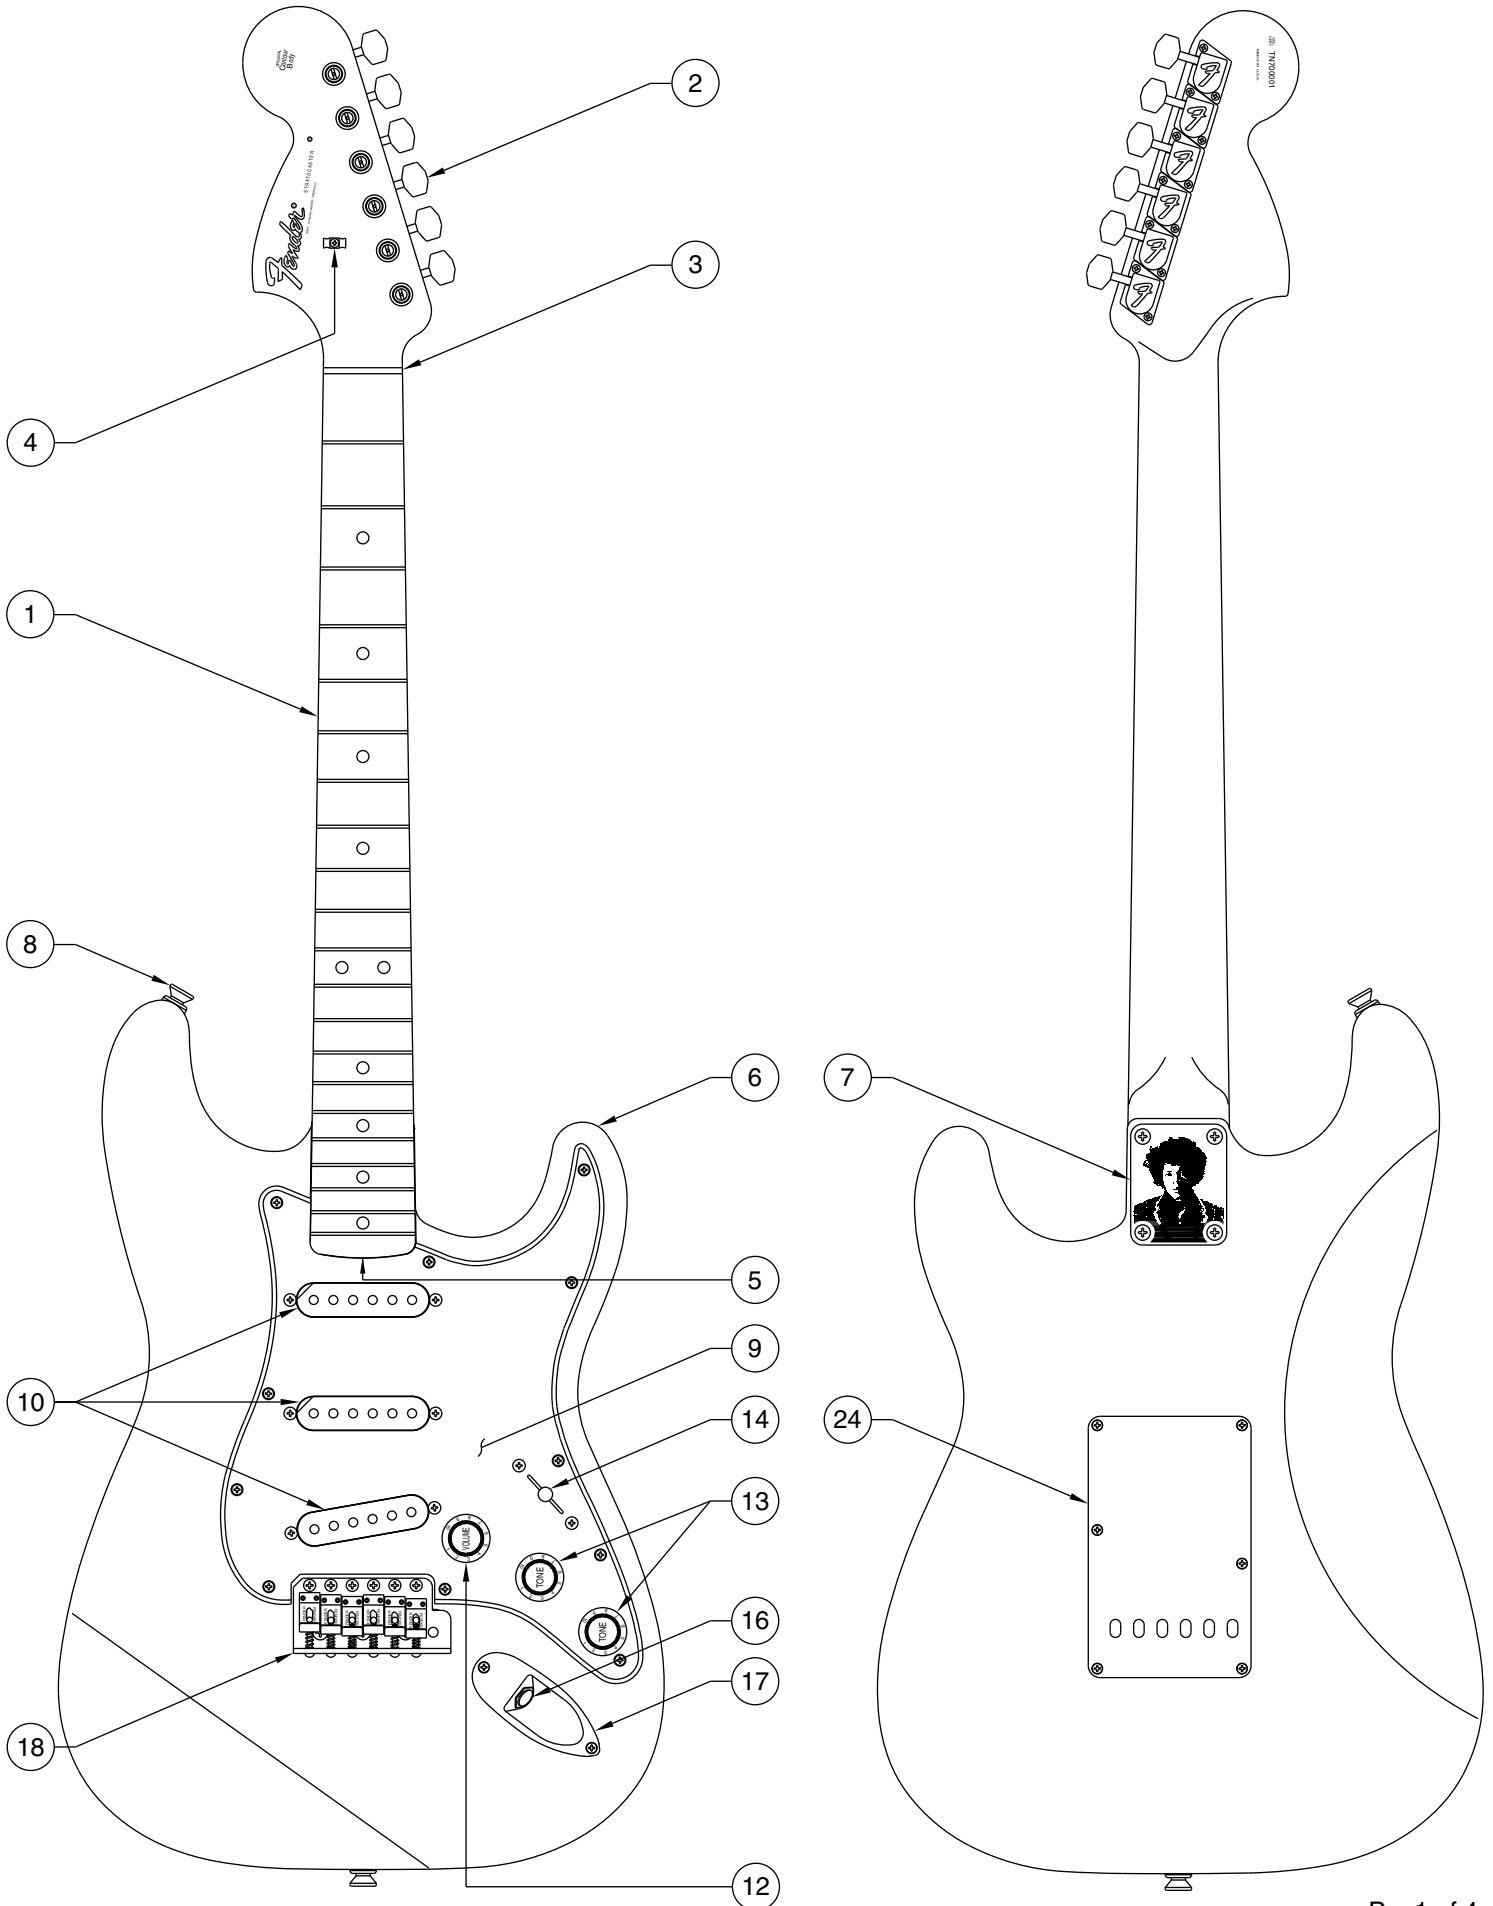


# VOODOO STRATOCASTER 0106602

## PICKGUARD ASSEMBLY

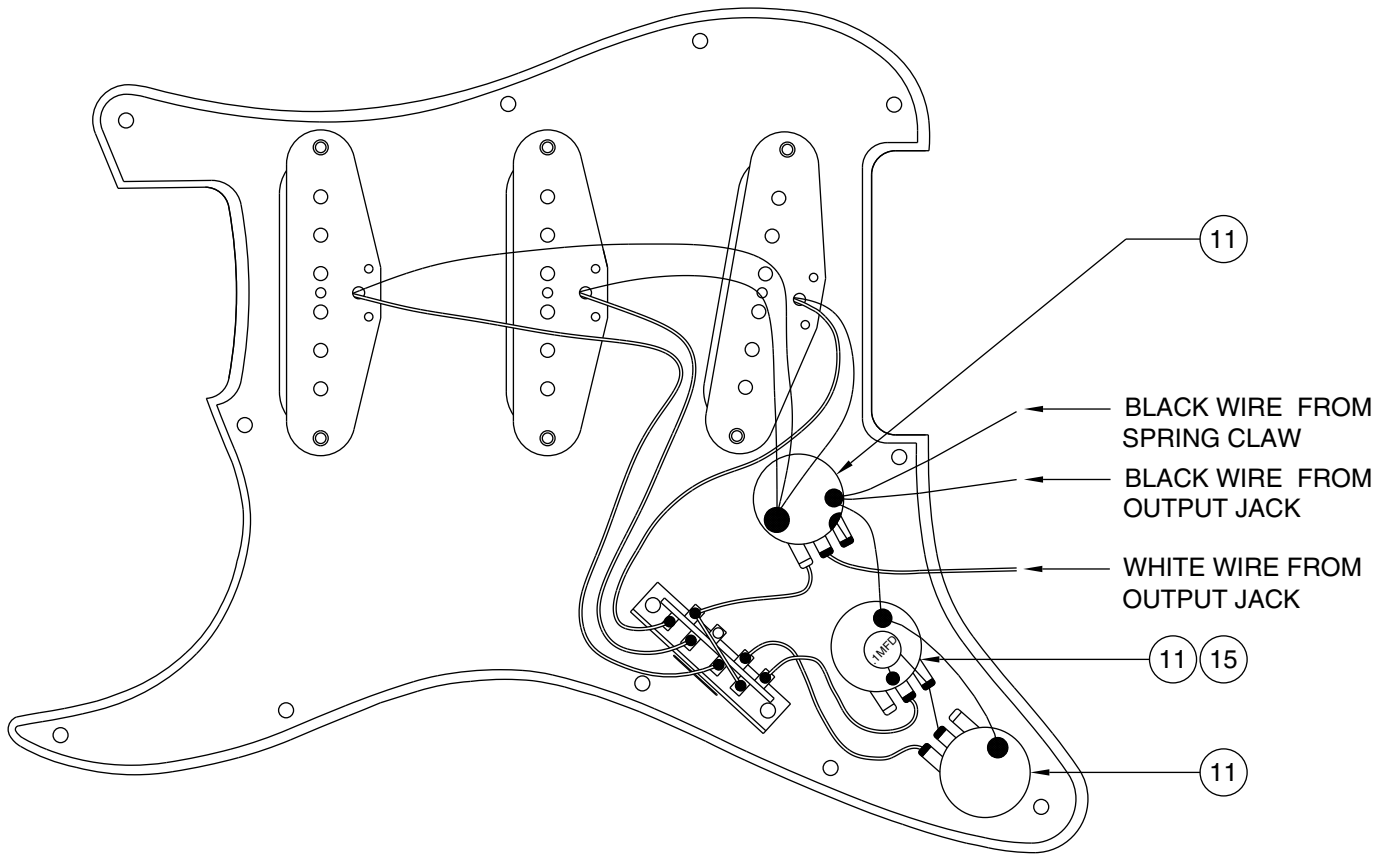

## BRIDGE ASSEMBLY

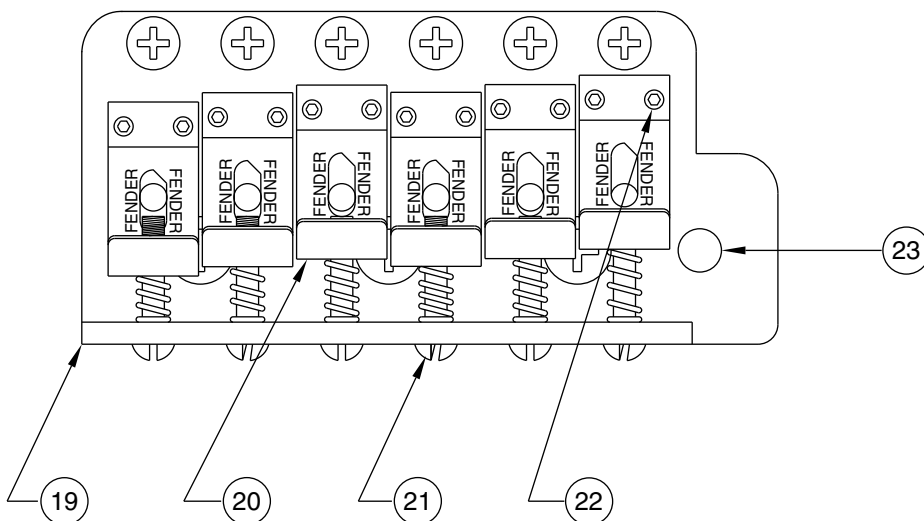

# VOODOO STRATOCASTER 0106602

REF.#	P/N	DESCRIPTION
1	0053315000	Neck, VooDoo Stratocaster, M/N
2	0050966000	Tuning Key, (1) Set
	0011357000	Mounting Screw
3	0083675000	Bone Nut
4	0010389000	String Retainer
	0020423000	Spacer
	0011358000	Mounting Screw
5	0012252000	Truss Rod Adjustment Nut
6	0053313xxx	Body, VooDoo Stratocaster, Solid Color
	0055282xxx	Body, VooDoo Stratocaster, Sunburst
7	0051503000	Neck Mounting Plate
	0015636000	Mounting Screw
8	0012344000	Strap Buttom
	0016188000	Mounting Screw
9	0053311000	Pickguard, VooDoo Strat, White/Black/White
	0015578000	Mounting Screw
10	0051507000	Pickup Assembly, '68 Strat, Left Hand (3)
	0015776000	Mounting Screw
	0036481000	Tubing, Latex Cut
11	0013446000	Control, 250k, Taper, (3)
	0016352000	Mounting Hex Nut
	0022384000	Lock Washer, Intl
12	0056149000	Knob, Volume, Aged White
13	0056148000	Knob, Tone, Aged White, (2)
14	0053291000	Switch, Lever 5 Position
	0015776000	Mounting Screw
	0019554000	Knob, Aged White
15	0051506000	Capacitor, .1uf
16	0021956000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
17	0010280090	Jack Ferrule
	0015578000	Mounting Screw
18	0019642000	Bridge Assembly, Vintage Strat
	0016170000	Mounting Screw
	0019473000	Bridge Block
	0019656000	Mounting Screw
	0010272100	Claw, Tremolo
	0015636000	Mounting Screw
	0031643000	Spring, Claw
	0019652040	Arm, Tremolo
	0019463000	Knob, Tremolo
19	0019470000	Bridge Plate
20	0019280000	Bridge Section, (6)
21	0015693000	Intonation Screw, (6)
	0019273000	Intonation Spring, 5&6
	0019281000	Intonation Spring, 1-4
22	0032782000	Height Adjustment Screw, 1&6
	0016071000	Height Adjustment Screw, 2-5
	0018531000	Height Adjusting Wrench
23	0012180000	Spring, Tremolo
24	0019649000	Back Plate, Tremolo, White
	0015578000	Mounting Screw

Body Part Number	
0055282500	3 Color Sunburst
0053313505	Olympic White
0053313506	Black

# VOODOO STRATOCASTER 0106602

## SWITCH & FUNCTION CONTROL

5 WAY SWITCH POSITION					
					← 5 WAY SWITCH POSITION
T1	T1&T2	T2	T2	—	← TONE CONTROL
					← NECK PICKUP
					← MIDDLE PICKUP
					← BRIDGE PICKUP
	PICKUP IS ON				PICKUP IS OFF

