


## BENEDETTO

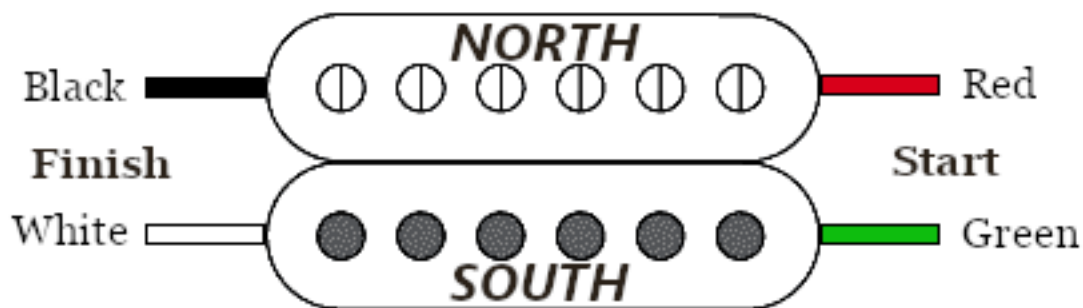


All Bare Wires  
Go To Ground

Humbucker  
Wiring


North = +  
South = -

## ANDERSON

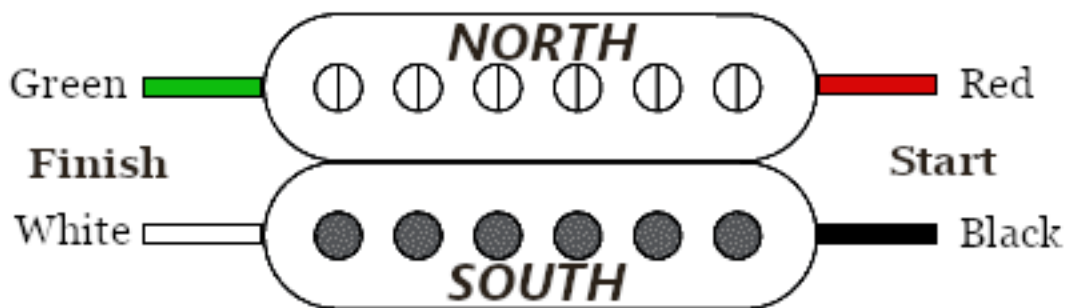

Connect Finish  
and insulate

## GOTOH

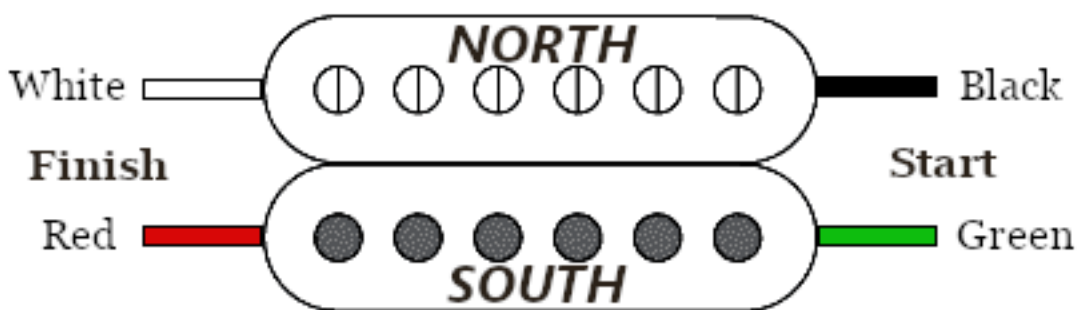

## CARVIN

