



AMERICAN DELUXE TELECASTER 0104600/4602

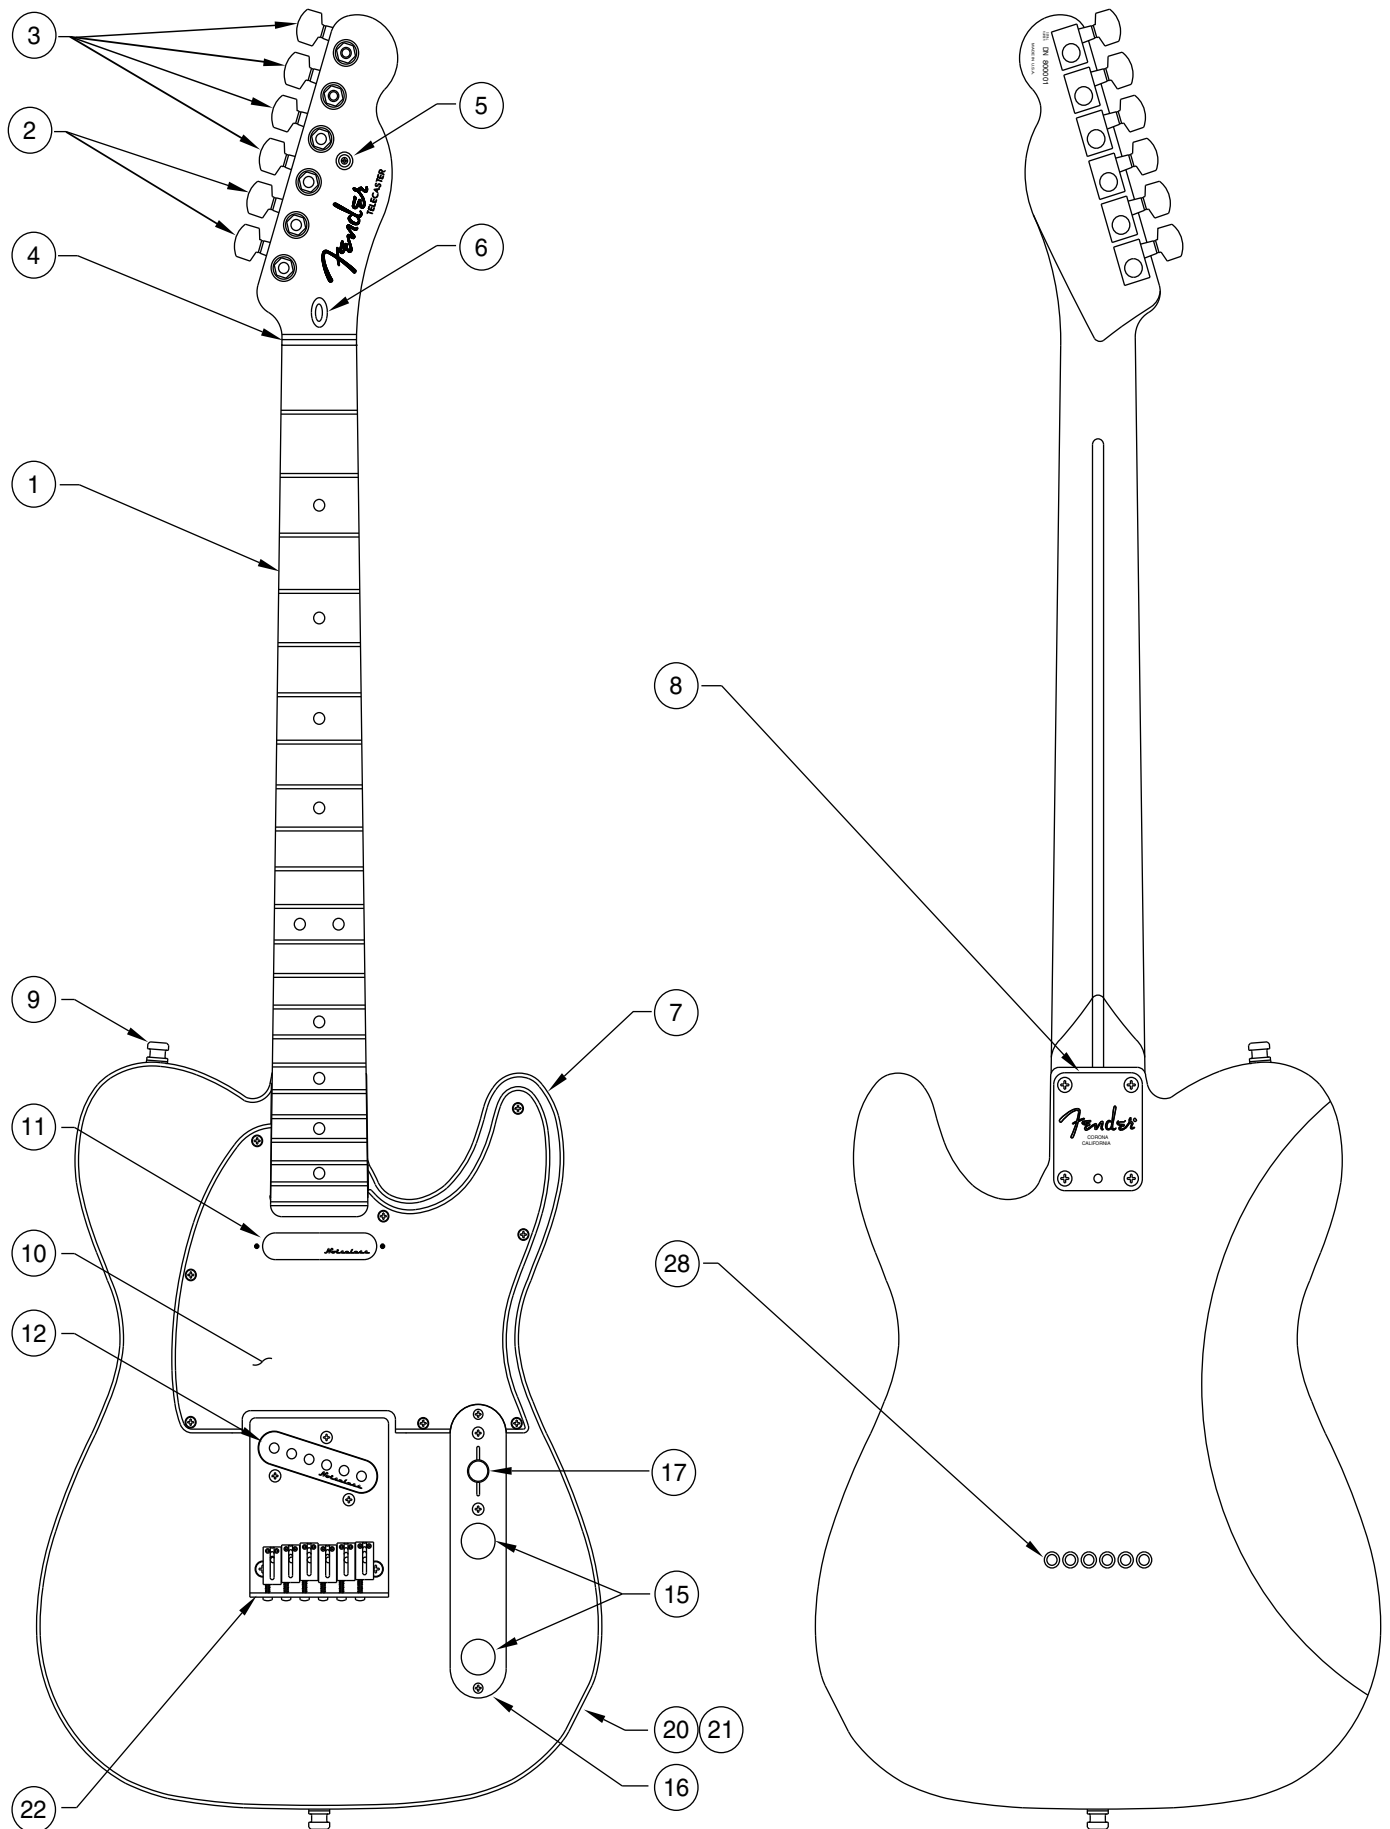


AMERICAN DELUXE TELECASTER 0104600/4602

CONTROL ASSEMBLY

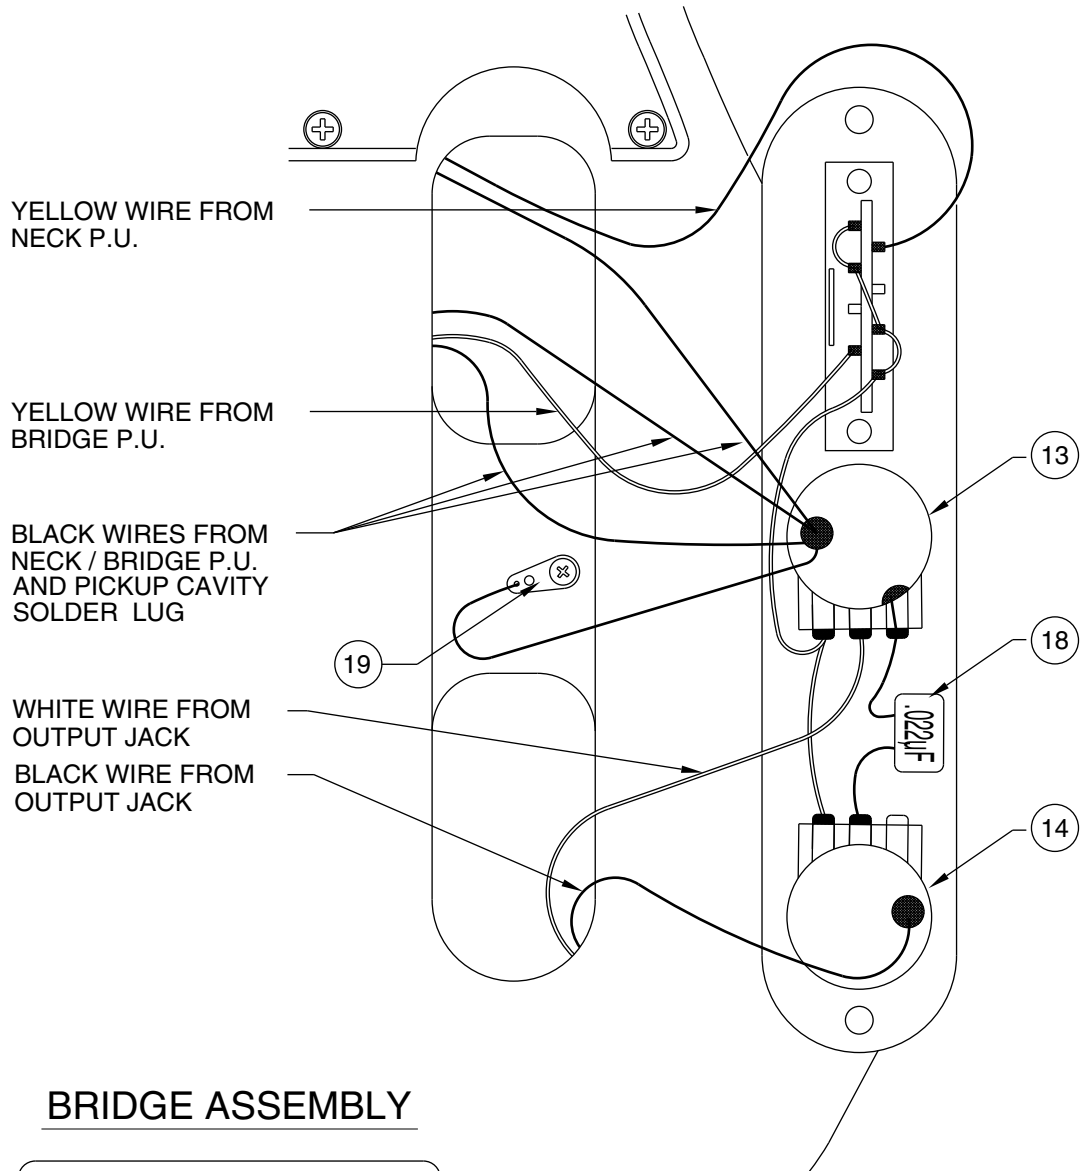

BRIDGE ASSEMBLY

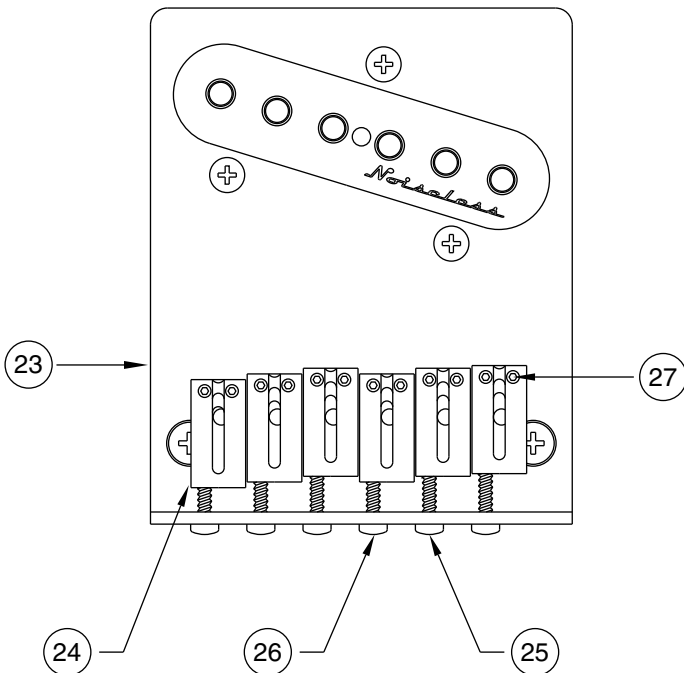


AMERICAN DELUXE TELECASTER 0104600/4602

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0054043000	Neck, American Deluxe Telecaster, M/N		0018270000	Height Adjustment Screw, 2-5
	0054042000	Neck, American Deluxe Telecaster, R/W		0018531000	Adjusting Wrench, Saddle Height
2	0021374000	Tuning Key, (1) Set, W/Bushing	28	0021429000	Ferrule, String Retainer
3	0056260000	Tuning Key, E,B,G,D, W/Bushing			
4	0083675000	Bone Nut			
5	0054625000	String Retainer			
	0021407000	Mounting Screw			
6	0020810000	Truss Rod Adjustment Nut			
	0023811000	Truss Rod Adjusting Wrench			
7	0056084xxx	Body, Am. Dlx. Tele., Solid Paint			
	0056085xxx	Body, Am. Dlx. Tele., Natural Ash			
	0056086xxx	Body, Am. Dlx. Tele., Sunburst			
8	0054038000	Neck Mounting Plate			
	0021424000	Mounting Screw			
	0031571000	Tilt Adjustment Screw			
	0023811000	Tilt Adjusting Wrench			
9	0021453000	Strap Button			
	0021422000	Mounting Screw			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
10	0056082000	Pickguard, Am. Dlx. Tele., Brown Shell			
	0056083000	Pickguard, Am. Dlx. Tele., Mint Green			
	0021407000	Mounting Screw			
11	0053660000	Pickup, Neck, Tele., Noise Free			
	0050166000	Mounting Screw			
	0039410000	Tubing, Latex Cut			
12	0053661000	Pickup, Bridge, Tele., Noise Free			
	0048631000	Mounting Screw			
	0036878000	Tubing, Latex Cut			
13	0019064000	Control, 250K, Audio			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
14	0050886000	Control, 250K, No Load			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
15	0013359000	Knob, Knurled (2)			
	0028897001	Screw Set			
16	0033134060	Control Plate			
	0021407000	Mounting Screw			
17	0053290000	Switch, Lever 3-Position			
	0021413000	Mounting Screw			
	0018359000	Knob, Black			
18	0024832000	Capacitor, .022uf			
19	0012869000	Solder Lug			
	0015116000	Mounting Screw			
20	0021956000	Output Jack			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
21	0021452000	Jack Ferrule			
22	0054048000	Bridge Assembly, Am. Dlx Tele			
	0021373000	Mounting Screw			
23	0028184000	Bridge Plate			
24	0036528000	Bridge Section, (6)			
25	0031913000	Intonation Screw, 5&6			
	0029095000	Intonation Spring, 5&6			
26	0017031000	Intonation Screw, 1- 4			
	0029094000	Intonation Spring, 1- 4			
27	0026780000	Height Adjustment Screw, 1&6			


Body Part Number	
0056084500	3 -Tone Sunburst
0056084506	Black
0056084538	Crimson Transparent
0056085501	White Blonde
0056085521	Natural
0056086548	Teal Green Trans.
0056086594	Purple Transparent

SWITCH & CONTROL FUNCTION

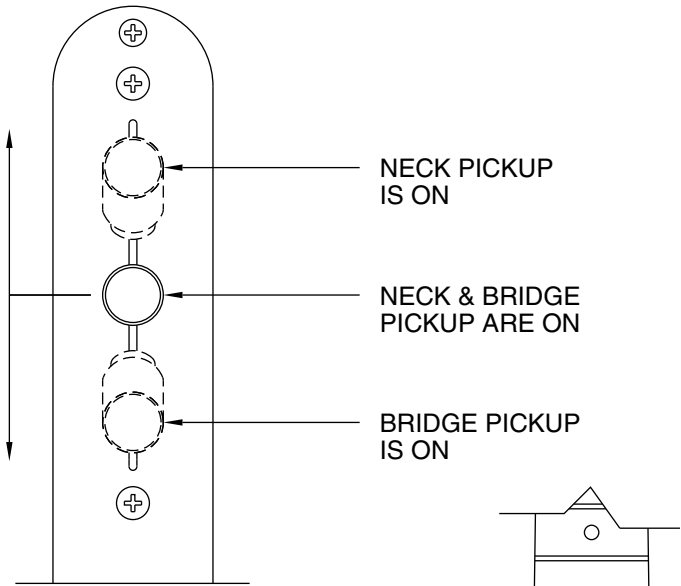

DETAIL
3 WAY SWITCH

3 WAY SWITCH POSITION			
			← 3 WAY SWITCH POSITION
T1	T1	T1	← TONE CONTROL
			← NECK PICKUP
			← BRIDGE PICKUP
	PICKUP IS ON		
			PICKUP IS OFF

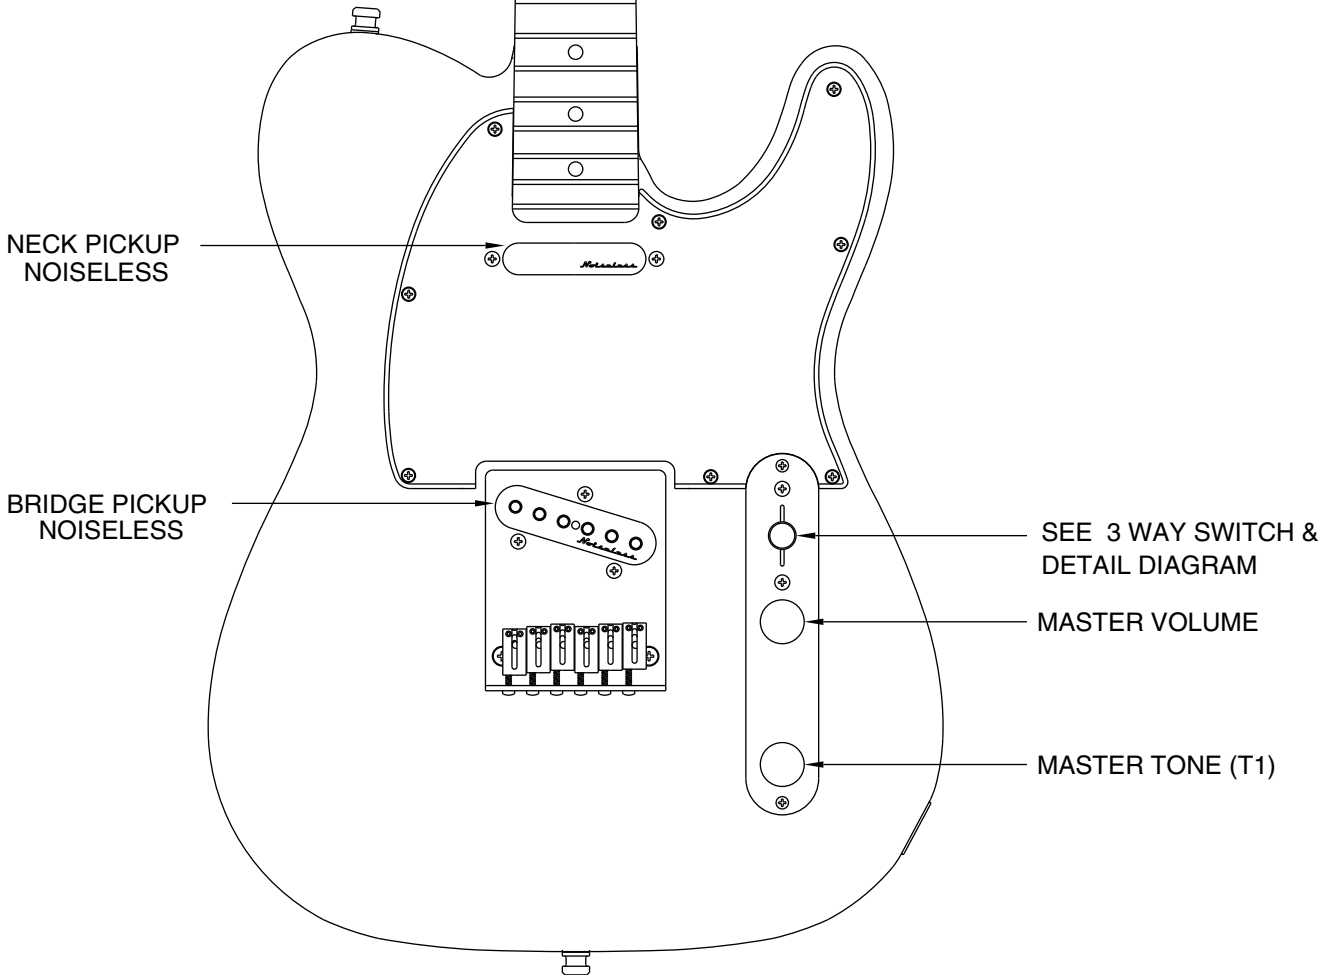

NECK PICKUP
NOISELESS

BRIDGE PICKUP
NOISELESS

SEE 3 WAY SWITCH &
DETAIL DIAGRAM

MASTER VOLUME

MASTER TONE (T1)

