
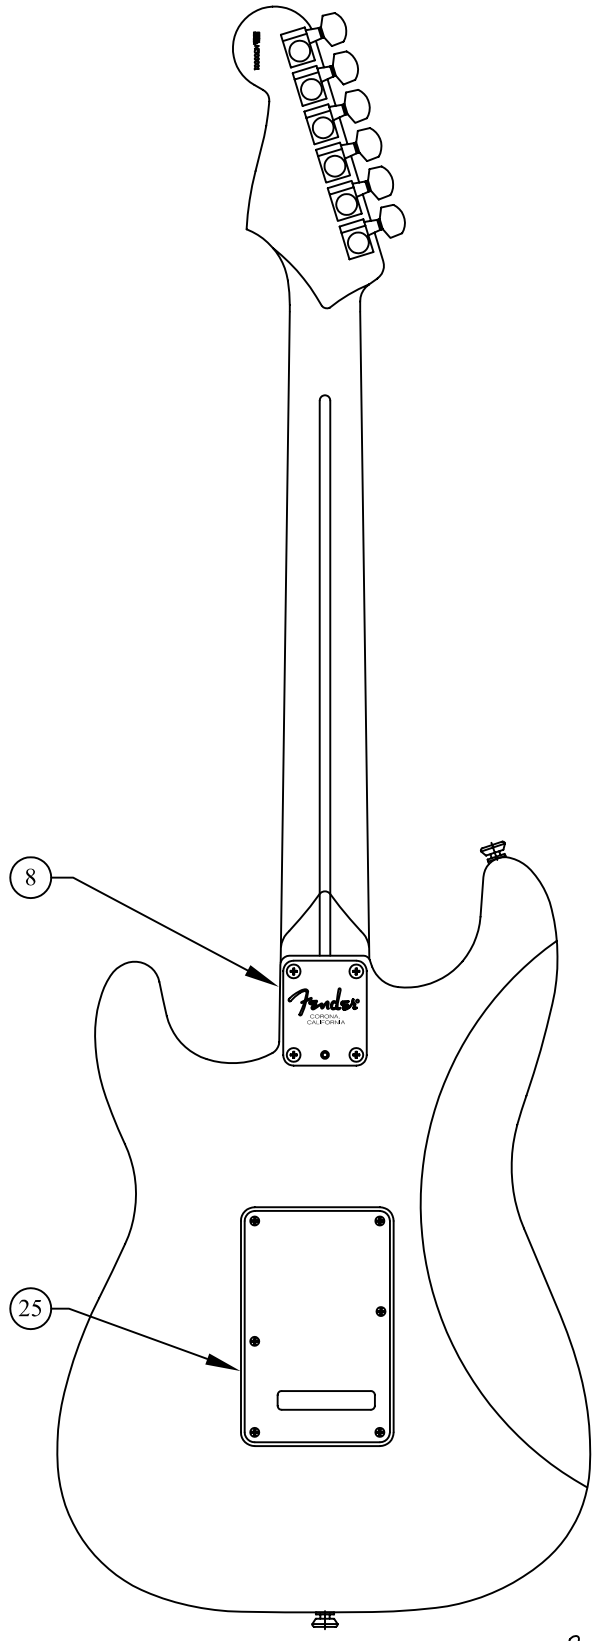





AMERICAN STRATOCASTER® HH, 0117100, R/W

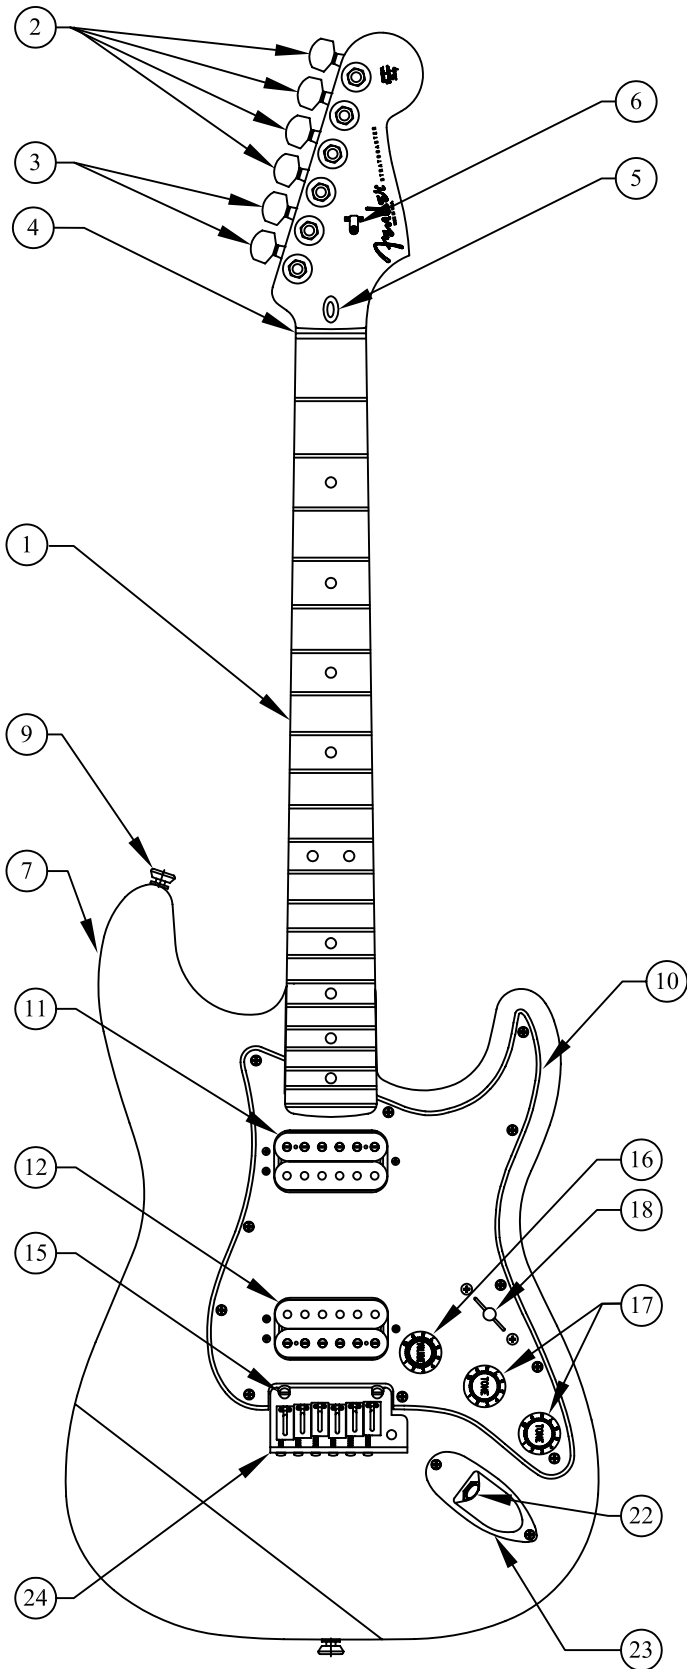


Fender[®]

AMERICAN STRATOCASTER® HH, 0117100, R/W

WIRING DIAGRAM

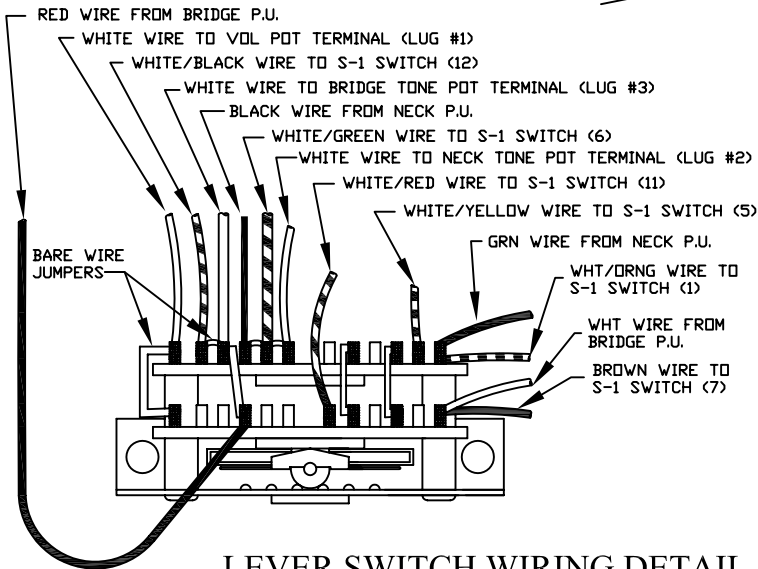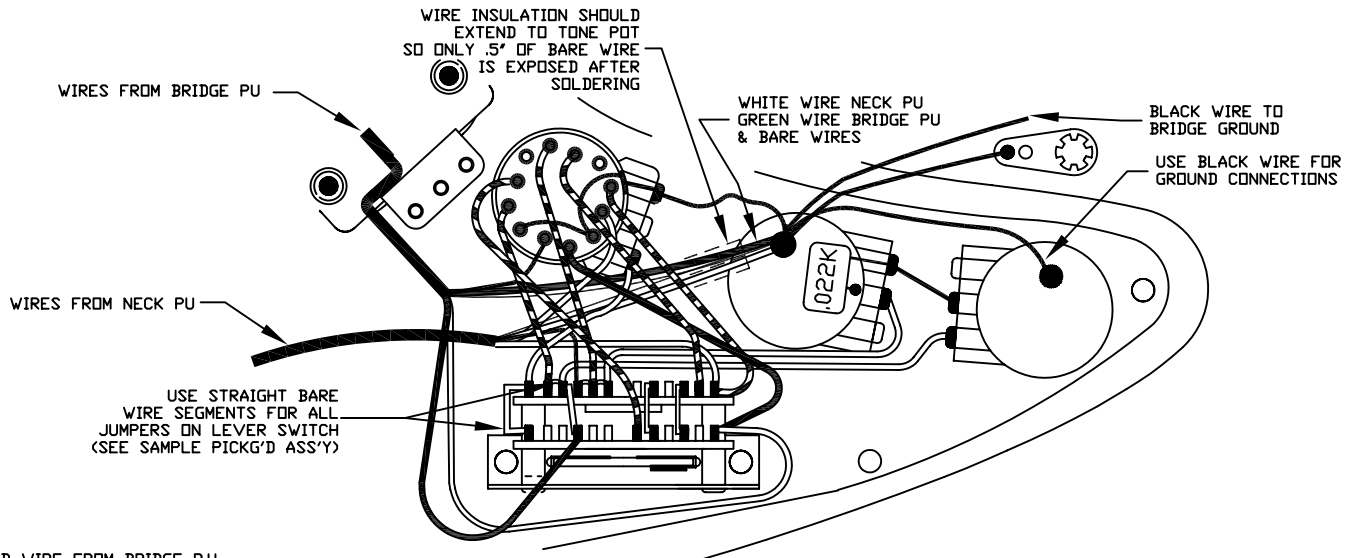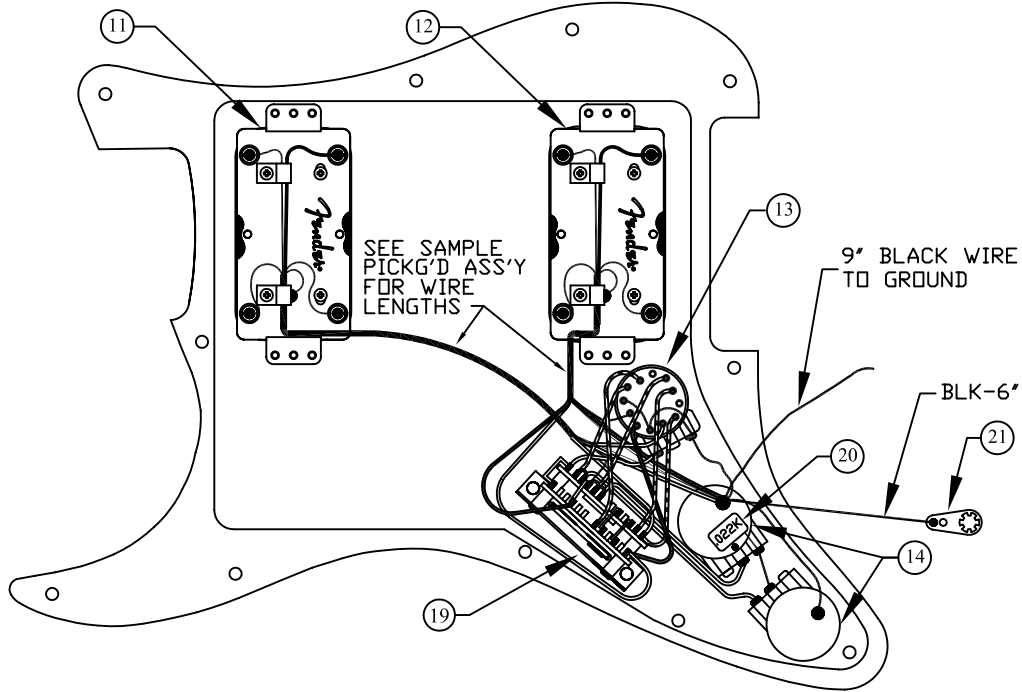

LEVER SWITCH WIRING DETAIL

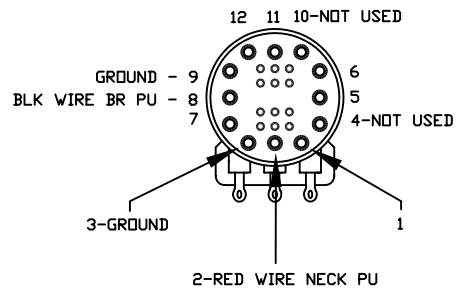

S-1 SWITCH WIRING DETAIL

AMERICAN STRATOCASTER® HH, 0117100, R/W


REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION	
1	0056215000	Neck, American Stratocaster®, RW	24	0026095000	Bridge Assembly	
2	0056260000	Tuning Key, (E,B,G,D) Std Schl		0013265000	Tremolo Arm	
	0058815000	Washer Schalr		0010272100	Tremolo Claw	
	0058820000	Bushing Schalr		0018671000	Tremolo Spring	
3	0021374000	Tuning Key, XGS-1C Std Schl		0015636000	Tremolo Claw Mounting Screw	
	0058815000	Washer Schalr		0026097000	Bridge Plate	
	0058820000	Bushing Schalr		0026099000	Bridge Section	
4	0083675000	Bone Nut		0017031000	Intonation Screw, (6)	
5	0023811000	Truss Rod Adjusting Wrench		0019395000	Intonation Spring, (5&6)	
6	0021537000	String Guide		0019394000	Intonation Spring, (1-4)	
	0021405000	Mounting Screw		0026779000	Height Adjustment Screw, (1&6)	
7	See Chart	Body Stratocaster®		0026780000	Height Adjustment Screw, (2-5)	
8	0054038000	Neck Mounting Plate		0026098000	Bridge Block	
	0021424000	Mounting Screw		25	0038492000	Back Plate AM Series Stratocaster®
	0031571000	Tilt Adjustment Screw			0021407000	Mounting Screw
	0023811000	Tilt Adjusting Wrench				
9	0063267000	Strap Button				
	0016188000	Mounting Screw				
	0019056000	Felt Washer, Black				
10	0055268000	Pickguard, B/W/B				
	0021407000	Mounting Screw				
11	0065290000	Pickup, Neck				
	0050167000	Spring				
	0050166000	Screw				
12	0063274000	Pickup, Bridge				
	0050167000	Spring				
	0050166000	Screw				
13	0061257000	Switch Pot Assembly 500K, Volume				
	0016352000	Mounting Nut				
	0016436000	Lock Washer				
14	0038950000	Control 500K				
	0016352000	Mounting Nut				
	0016436000	Lock Washer				
15	0028957000	Pivot Screw				
	0028958000	Insert				
16	0059267020	Knob, Volume Black				
	0059266020	Cap, Volume Black				
17	0056146000	Knob, Tone Black				
18	0013267000	Knob, Selector Switch Black				
19	0050610000	Switch, 5-Position, 4 Pole				
	0021417000	Mounting Screw				
20	0024832000	Capacitor, .022uF				
21	0012869000	Solder Lug				
	0015116000	Mounting Screw				
22	0021956000	Output Jack				
	0016436000	Lock Washer				
	0016352000	Mounting Hex Nut				
23	0010280090	Jack Ferrule				
	0021407000	Mounting Screw				

BODY COMBINATION CHART

BODY	
P/N	Color
0056229506	Black
0056229525	Chrome Red
0056229591	Chrome Silver
0056229595	Chrome Blue

AMERICAN STRATOCASTER® HH, 0117100, R/W

SWITCH & CONTROL FUNCTION

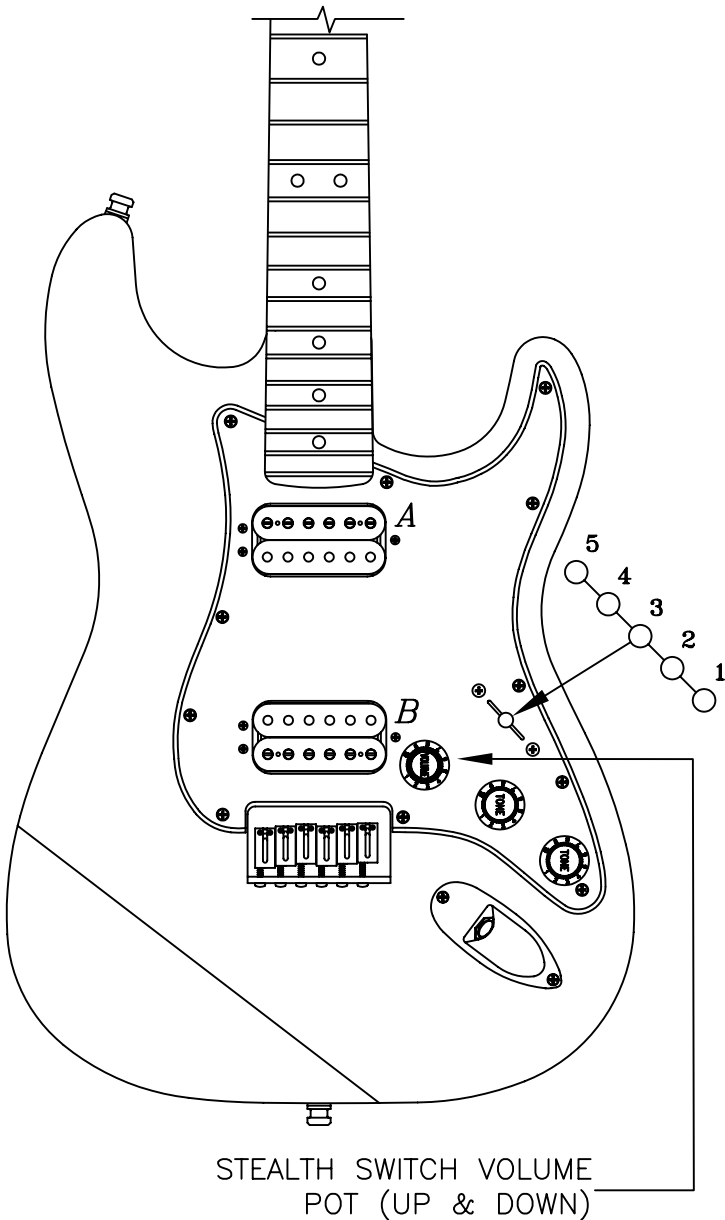

5 WAY SW POSITIONS, STEALTH SW UP					
5	4	3	2	1	POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
					← BRIDGE PICKUP (B)

5 WAY SW POSITIONS, STEALTH SW DOWN					
5	4	3	2	1	POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
					← BRIDGE PICKUP (B)

MV = MASTER VOLUME
 NT = NECK TONE
 BT = MID/BRIDGE TONE
 SER = COIL PAIR IN SERIES
 PAR = COIL PAIR IN PARALLEL
 INS = INSIDE COILS IN PARALLEL,
 SERIES WITH OUTSIDE COIL

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)

INDICATES POSITION OF 5 WAY SWITCH