

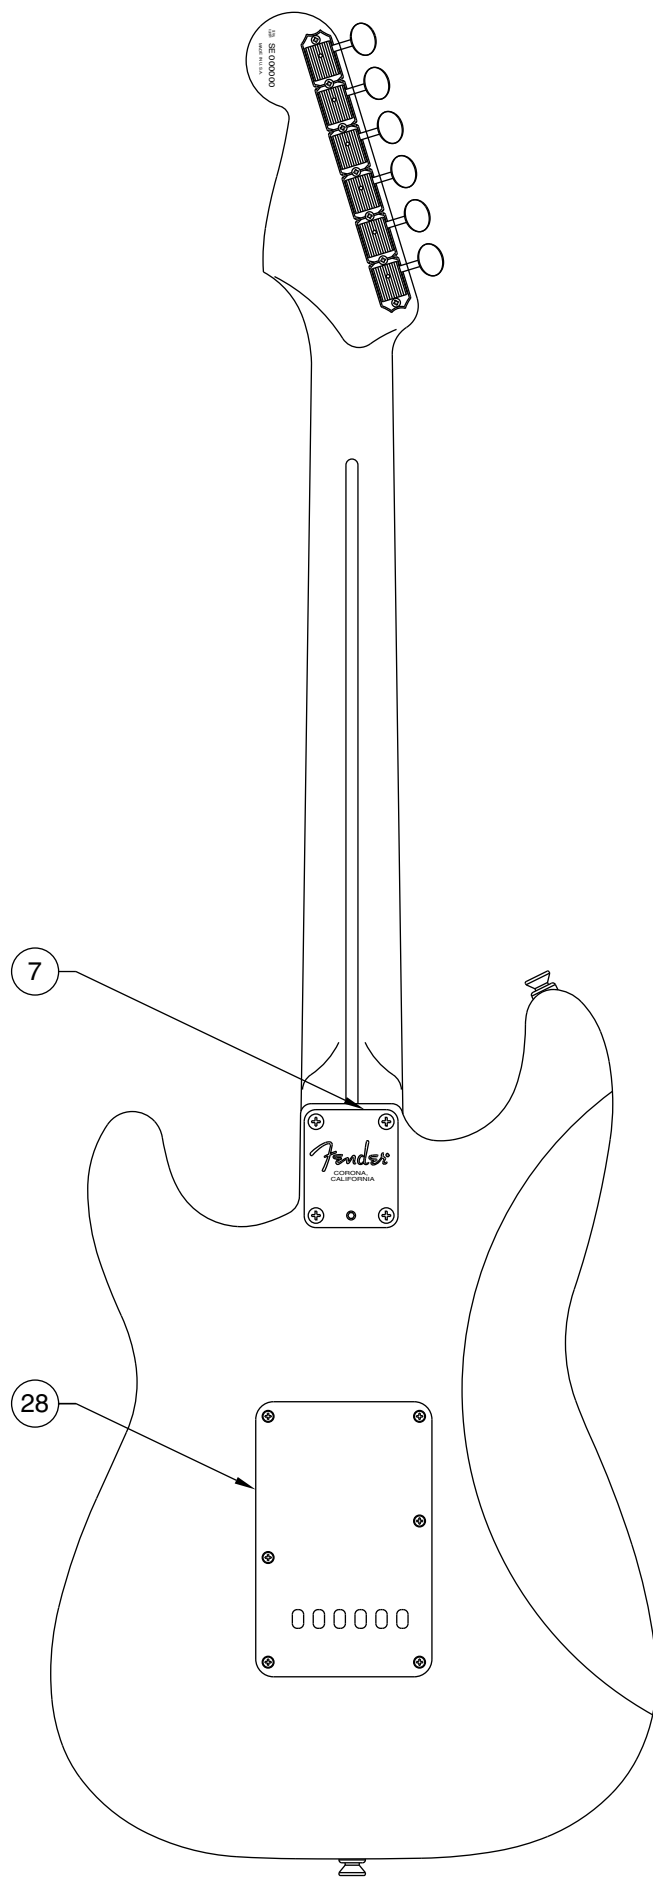



ERIC CLAPTON STRATOCASTER 0107602

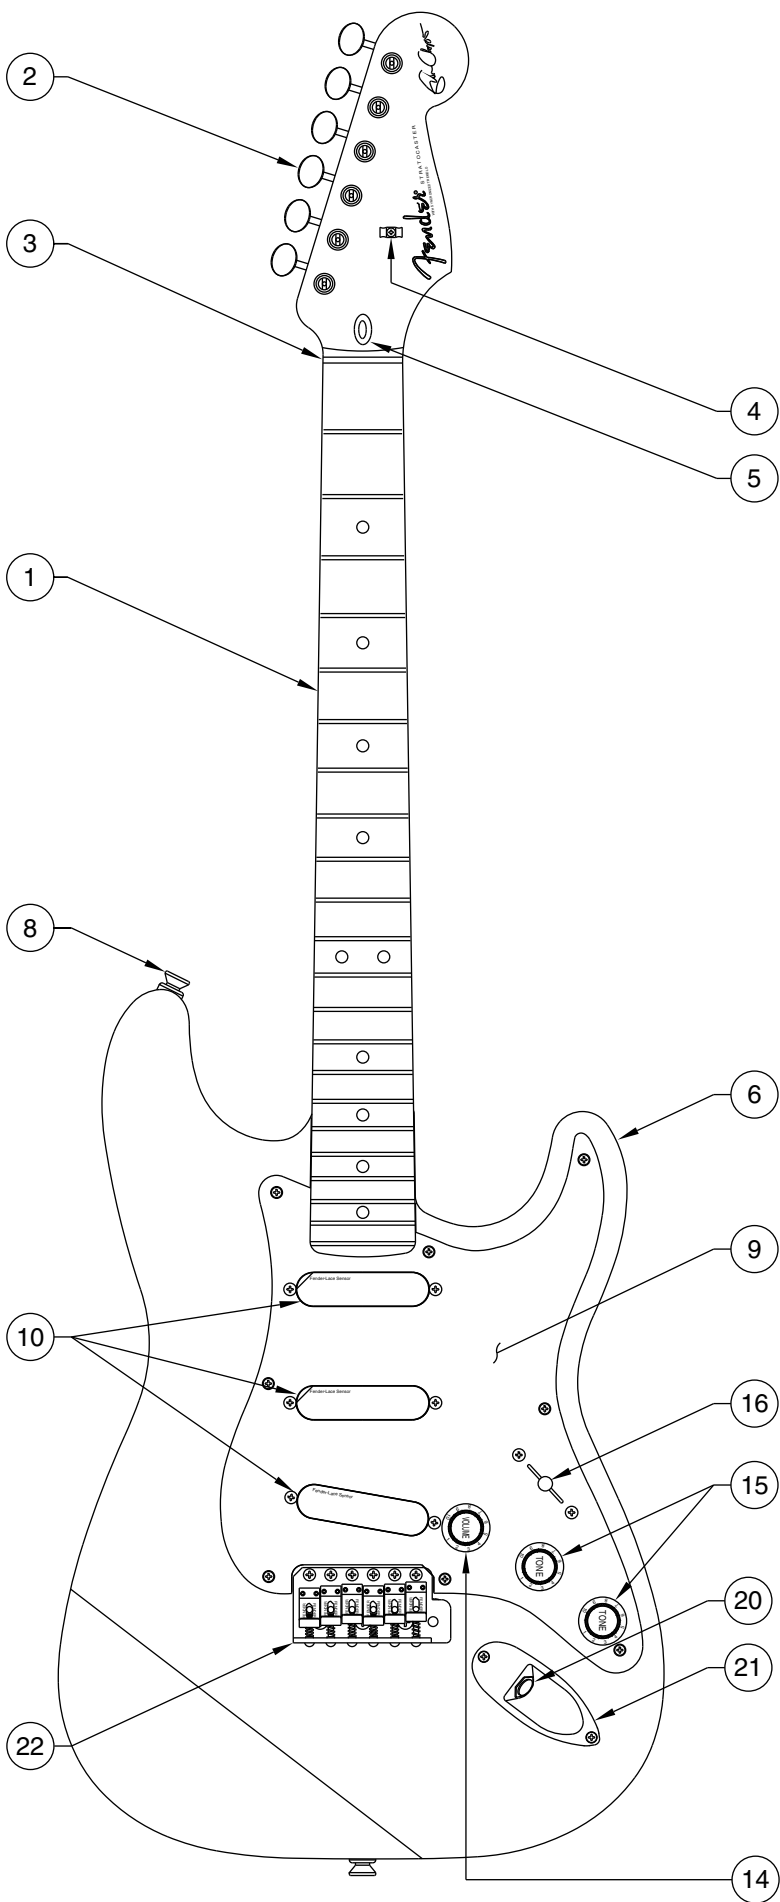

ERIC CLAPTON STRATOCASTER 0107602 PICKGUARD ASSEMBLY

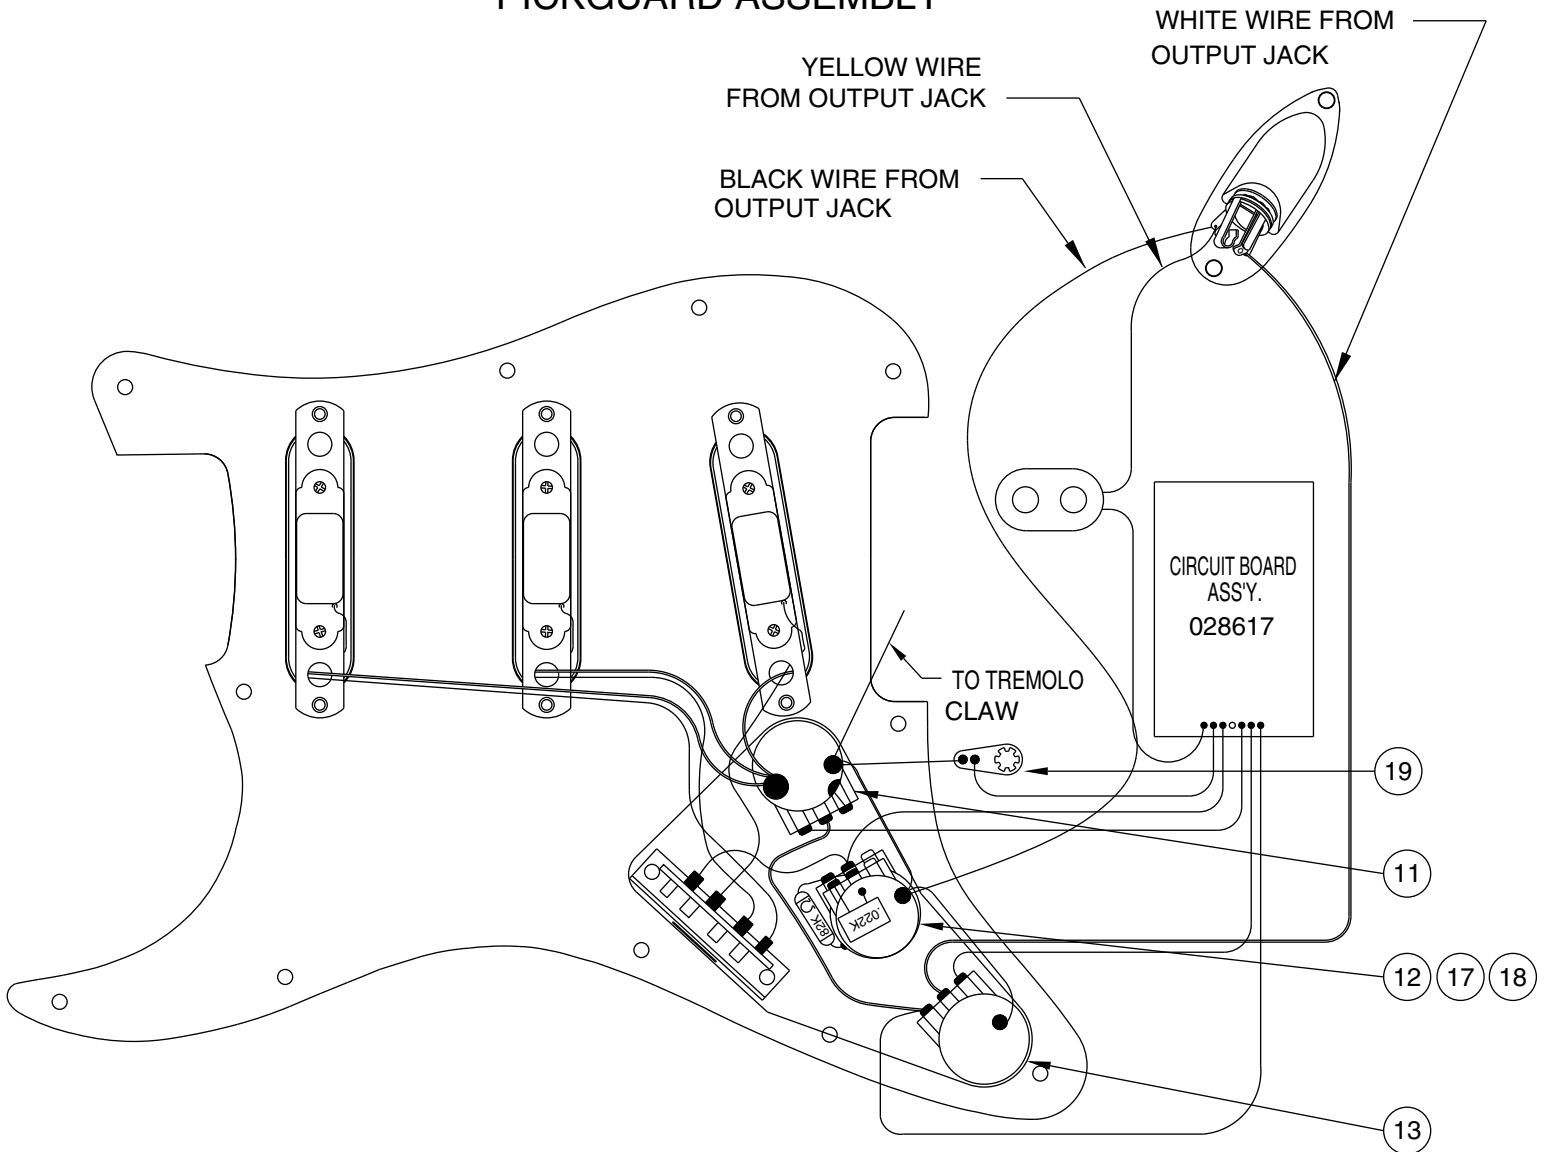

BRIDGE ASSEMBLY

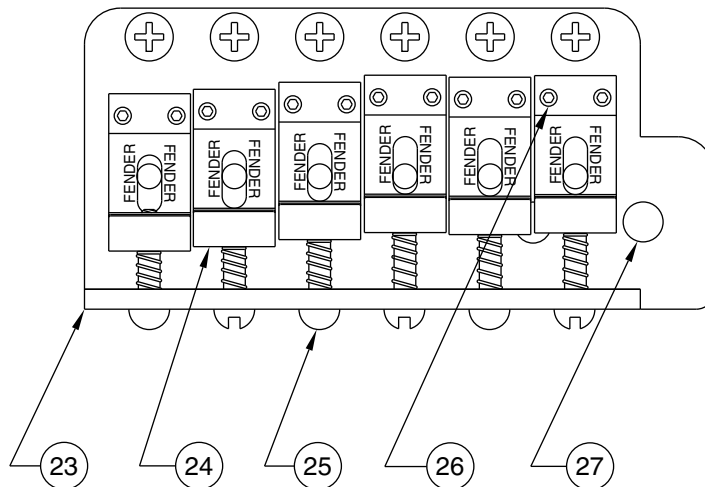

ERIC CLAPTON STRATOCASTER 0107602

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0029685000	Neck, Clapton Stratocaster, M/N		0019281000	Intonation Spring, 1-4
2	0019309000	Tuning Key, (1) Set	26	0032782000	Height Adjustment Screw, 1&6
	0011357000	Mounting Screw		0016071000	Height Adjustment Screw, 2-5
	0019312000	Bushing		0018531000	Height Adjusting Wrench
3	0083675000	Bone Nut	27	0012180000	Spring, Tremolo
4	0010389000	String Retainer	28	0019649000	Back Plate, Tremolo, White
	0011358000	Mounting Screw		0015578000	Mounting Screw
	0020423000	Spacer			
5	0020810000	Truss Rod Adjustment Nut			
	0023811000	Truss Rod Adjusting Wrench			
6	0028451xxx	Body, Clapton Strat, Solid Paint			
7	0054038000	Neck Mounting Plate			
	0015636000	Mounting Screw			
	0031571000	Tilt Adjustment Screw			
	0023811000	Tilt Adjusting Wrench			
8	0012344000	Strap Buttom			
	0016188000	Mounting Screw			
9	0019490000	Pickguard, Vintage Strat, White			
	0015578000	Mounting Screw			
10	0027666000	Pickup Assembly, Lace Sensor (3)			
	0015776000	Mounting Screw			
	0036878000	Tubing, Latex Cut			
11	0021682000	Control, 50k, Audio			
	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer, Intl			
12	0021686000	Control, 250K, 1Meg, Dual			
	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer, Intl			
13	0028531000	Control, 250K, Taper			
	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer , Intl			
14	0056149000	Knob, Volume, Aged White			
15	0056148000	Knob, Tone, Aged White, (2)			
16	0053291000	Switch, Lever, 5 Position			
	0015776000	Mounting Screw			
	0019554000	Knob, Aged White			
17	0024832000	Capacitor, .022uf			
18	0024996001	Resistor, 82K			
19	0012869000	Solder Lug			
	0015116000	Mounting Screw			
20	0039432000	Output Jack			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
21	0010280090	Jack Ferrule			
	0015578000	Mounting Screw			
22	0019642000	Bridge Assembly, Vintage Strat			
	0016170000	Mounting Screw			
	0019473000	Bridge Block			
	0019656000	Mounting Screw			
	0010272100	Claw, Tremolo			
	0015636000	Mounting Screw			
	0031643000	Spring, Claw			
	0019652040	Arm, Tremolo			
	0019463000	Knob, Tremolo			
23	0019470000	Bridge Plate			
24	0019280000	Bridge Section, (6)			
25	0015693000	Intonation Screw, (6)			
	0019273000	Intonation Spring, 5&6			

Body Part Number	
0028451505	Olympic White
0028451506	Black
0028451543	Pewter
0028451558	Torino Red
0028451578	Candy Green

ERIC CLAPTON STRATOCASTER 0107602

SWITCH & CONTROL FUNCTION

5 WAY SWITCH POSITION					
● 5 ○ ○ ○ ○ ○	● 4 ○ ○ ○ ○ ○	○ ● 3 ○ ○ ○ ○ ○	○ ○ ● 2 ○ ○ ○ ○ ○	○ ○ ○ ● 1 ○ ○ ○ ○ ○	← 5 WAY SWITCH POSITION
●	●	○	○	○	← NECK PICKUP
○	●	●	●	○	← MIDDLE PICKUP
○	○	○	●	●	← BRIDGE PICKUP
●	← PICKUP IS ON			○	← PICKUP IS OFF

