




NASHVILLE B-BENDER TELECASTER 0118342

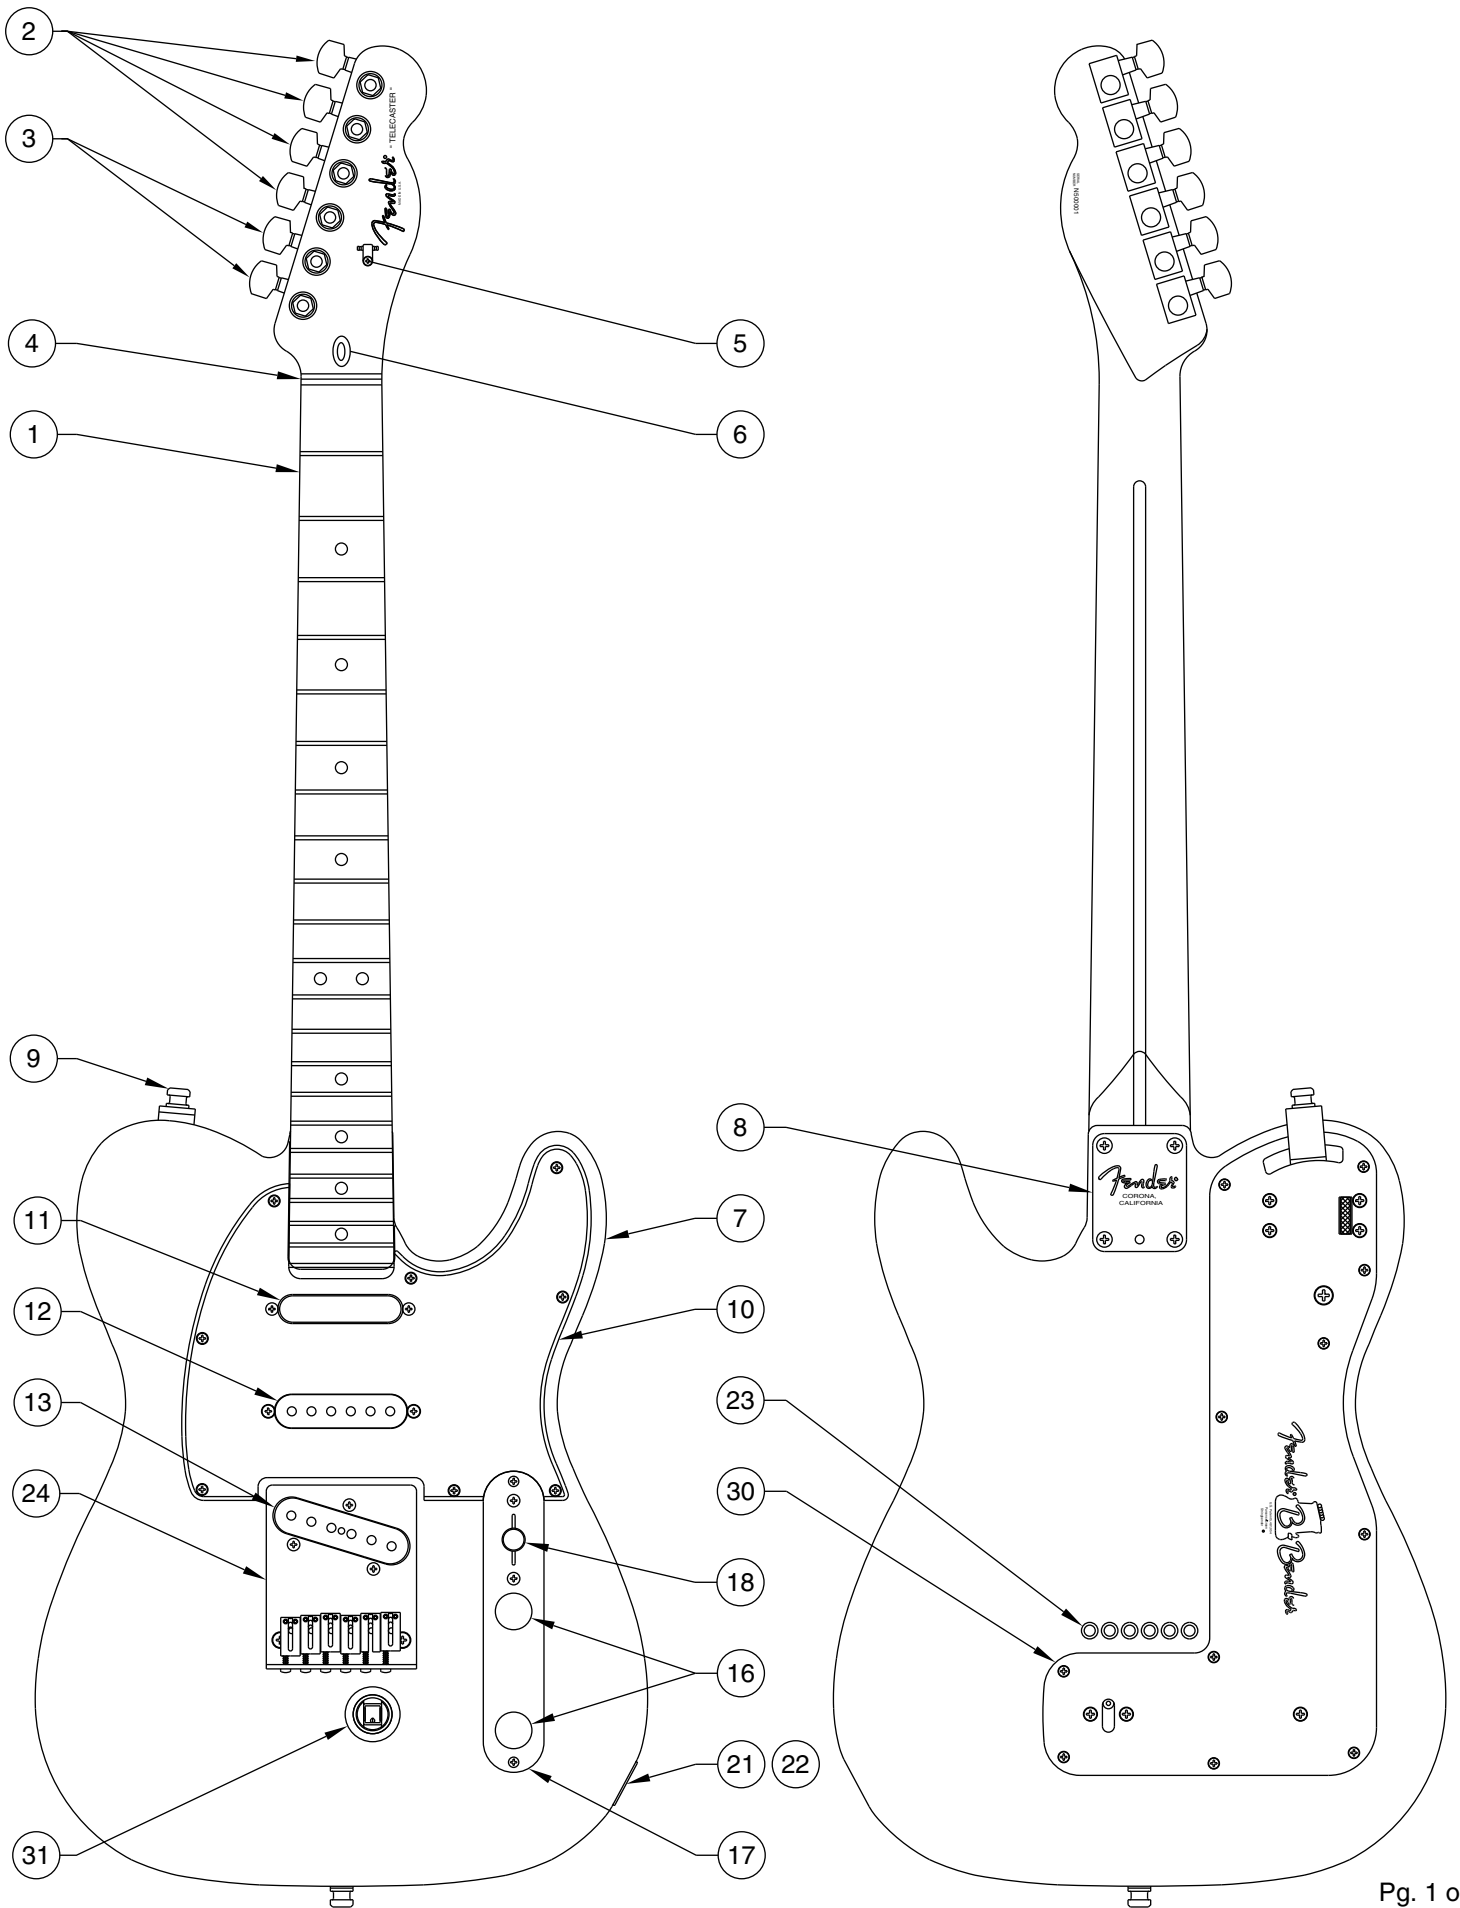

CONTROL ASSEMBLY

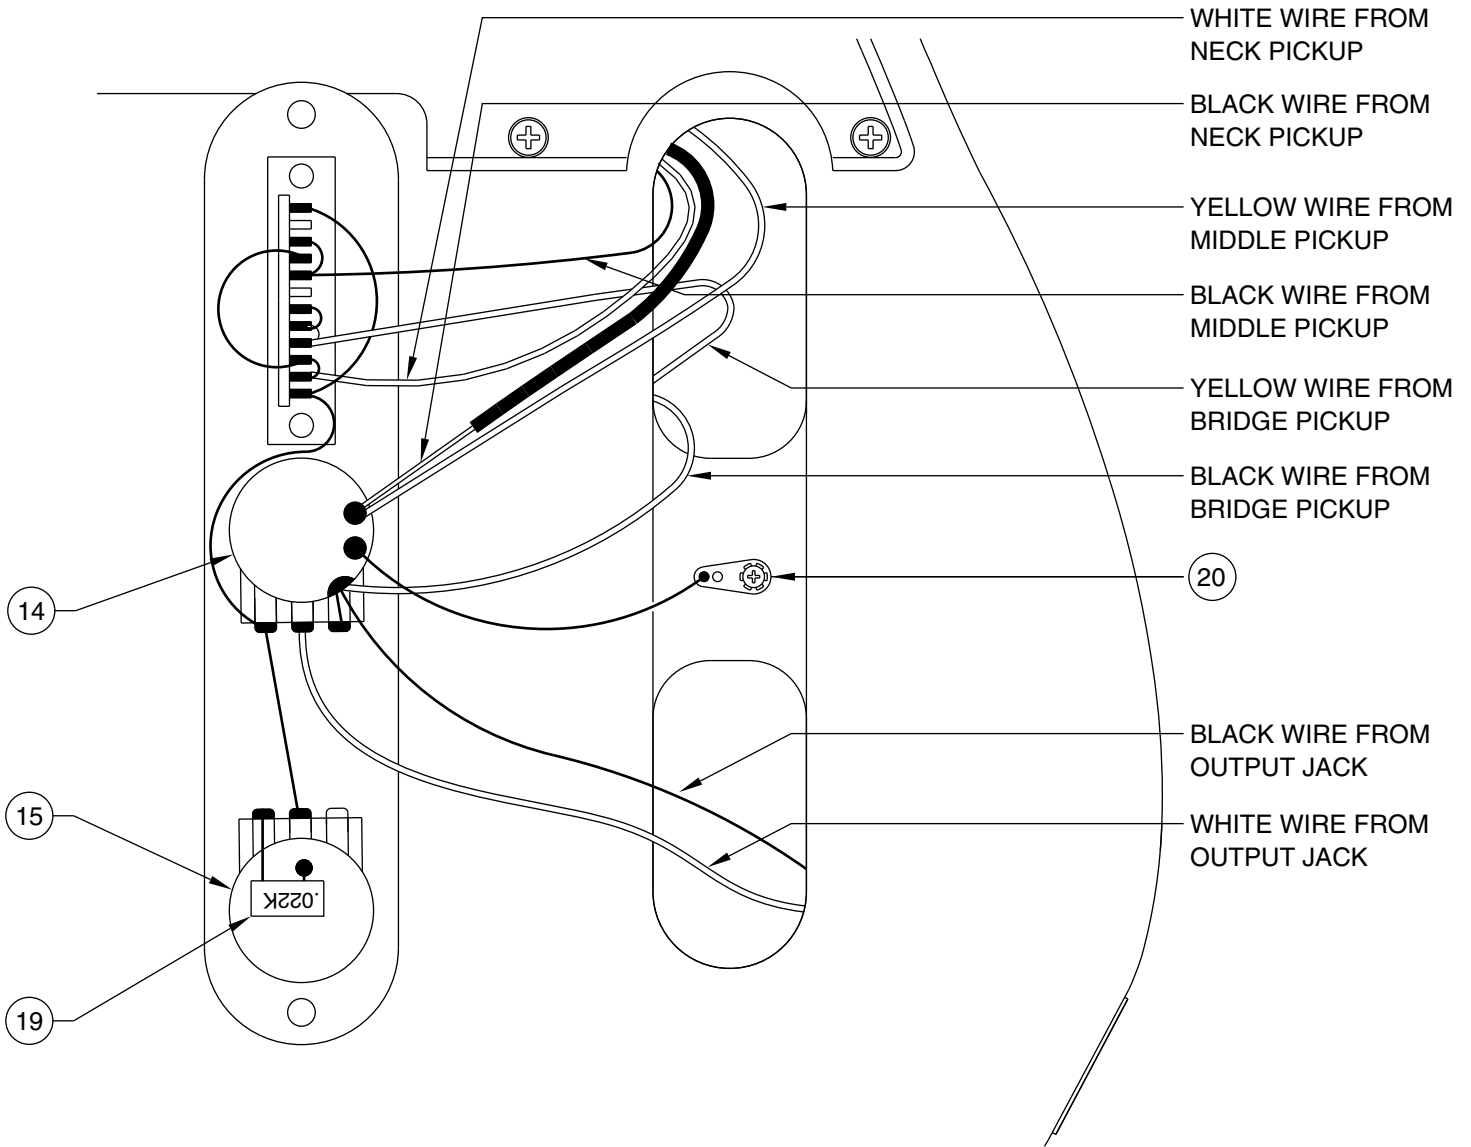

BRIDGE ASSEMBLY

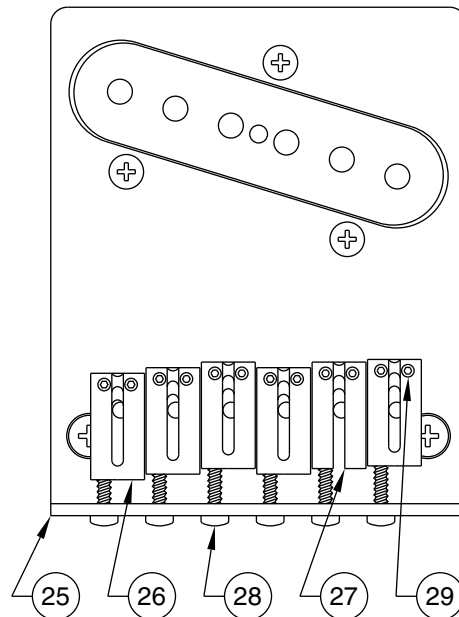


BLACK WIRE FROM MIDDLE PICKUP

YELLOW WIRE FROM BRIDGE PICKUP

WHITE WIRE FROM NECK PICKUP

WHITE WIRE FROM VOLUME POT TERMINAL

SWITCH WIRING DETAIL

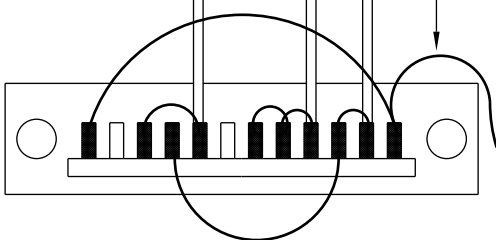

NASHVILLE B-BENDER TELECASTER 0118342

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0056220000	Neck, American Telecaster, M/N		0029095000	Intonation Spring, 5&6
2	0056260000	Tuning Key, (1) Set, E,B,G,D	29	0026780000	Height Adjustment Screw, 1&6
3	0021374000	Tuning Key, (1) Set		0018027000	Height Adjustment Screw, 2-5
4	0083675000	Bone Nut		0018531000	Adjusting Wrench, Saddle Height
5	0021537000	String Retainer	30	0050640000	B-Bender Assembly
	0021405000	Mounting Screw		0021407000	Mounting Screw
6	0020810000	Truss Rod Adjustment Nut	31	0050619000	Ferrule, B-Bender
	0023811000	Truss Rod Adjusting Wrench			
7	0054072xxx	Body, Hot Rod B-Bender Tele., Sunburst			
8	0054038000	Neck Mounting Plate			
	0021424000	Mounting Screw			
	0031571000	Tilt Adjustment Screw			
	0023811000	Tilt Adjusting Wrench			
9	0021453000	Strap Button			
	0021422000	Mounting Screw			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
10	0048638000	Pickguard, Telecaster Plus, Pearl			
	0021407000	Mounting Screw			
11	0050890000	Pickup, Neck, Am. Tele, Hot			
	0021409000	Mounting Screw			
	0039409000	Tubing, Latex Cut			
12	0056246000	Pickup, Middle, Texas Special			
	0048631000	Mounting Screw			
	0036481000	Tubing, Latex Cut			
13	0050888000	Pickup, Bridge, Am. Tele., Hot			
	0048631000	Mounting Screw			
	0036878000	Tubing, Latex Cut			
14	0019064000	Control, 250K, Audio			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
15	0050886000	Control, 250K, Solid			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
16	0013359000	Knob, Knurled (2)			
	0028897001	Screw Set			
17	0033134060	Control Plate			
	0021407000	Mounting Screw			
18	0039003000	Switch, Lever 5-Position			
	0021413000	Mounting Screw			
	0018359000	Knob, Black			
19	0024832000	Capacitor, .022uf			
20	0012869000	Solder Lug			
	0015116000	Mounting Screw			
21	0021956000	Output Jack			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer, Intl			
	0010355060	Retainer, Jack			
22	0021452000	Ferrule, Jack			
23	0021429000	Retainer, String			
24	0050642000	Bridge Assembly, B-Bender Tele.			
	0021373000	Mounting Screw			
25	0050632000	Bridge Plate			
26	0026099000	Bridge Section, (5)			
27	0050633000	B - Bridge Section, (1)			
28	0017031000	Intonation Screw, 1-4			
	0029094000	Intonation Spring, 1-4			
	0031913000	Intonation Screw, 5&6			

Body Part Number	
0054072500	3 Color Sunburst
0054072505	White
0054072506	Black
0054072509	Candy Apple Red

SWITCH & CONTROL FUNCTION

5 WAY SWITCH POSITION					
					← 5 WAY SWITCH POSITION
					← NECK PICKUP
					← MIDDLE PICKUP
					← BRIDGE PICKUP
	← PICKUP IS ON				← PICKUP IS OFF

